



Installation and Maintenance Guide

Setup, Operation, Maintenance of RPG standard single-polarization radiometers



Applicable for
HATPRO, LHATPRO, TEMPRO, HUMPRO, LHUMPRO,
LWP, LWP-U90, LWP-U72-82, LWP-90-150,
Tau-225, Tau-225-350



Document Change Log

Date	Issue/Rev	Change
07.07.2011	00/01	Work
20.07.2011	01/00	Release
15.12.2011	01/01	description of weather station installation added (2.6.5)
20.12.2011	01/02	description of new 2 line fiber connector system added (2.7.4)
17.04.2014	01/03	changes in packing materials
23.03.2015	01/04	Mounting procedure for new IRR housing added
12.08.2016	01/05	Update to G5



Table of Contents

Installation and Maintenance Guide	1
Document Change Log	2
Table of Contents.....	3
1 Scope of this document.....	5
2 Setup and Installation.....	5
2.1 Choice of location	5
2.2 Unpacking the radiometer and accessories	6
2.2.1 Radiometer Box	6
2.2.2 Accessories.....	7
2.3 Setup the Instrument Stand	7
2.4 Setup of the Azimuth Positioner (Optional)	10
2.5 Mounting of Radiometer Box	15
2.6 Mounting of Externals (Blower, Heater, IRR, Weather Station)	21
2.6.1 Dew Blower	21
2.6.2 Heater Module.....	22
2.6.3 Mounting of IR Radiometer (Optional)	25
2.6.4 External Rain Sensor and GPS Clock	31
2.6.5 External Weather Station	32
2.7 Fibre Optics Converter.....	34
2.7.3 Old Version (6 Lines).....	Fehler! Textmarke nicht definiert.
2.7.4 New Version (2 Lines).....	Fehler! Textmarke nicht definiert.
2.8. Electrical Connections	35
2.9 Recommendations for Viewing Directions and Angles.....	37
3 Quick Start Guide.....	39
3.1 Safety precautions.....	39
3.1.1 Safety of the instrument	39
3.1.2 Safety during liquid nitrogen calibrations	40
3.1.3 Safety considerations with moveable parts (azimuth, elevation).....	40
3.2 Power up	40
3.3 Connect Host to Radiometer.....	41
3.4 Sending a Measurement Definition File	44
3.5 Browsing Through the Measurement Displays.....	46
3.6 Starting/Stopping Measurements.....	51



4 Maintenance	52
4.1 Cleaning	52
4.2 Software Upgrades	52
4.3 Absolute Calibration Procedure	53
4.3.1 External Liquid Nitrogen Cooled Calibration Target... Fehler! Textmarke nicht definiert.	
4.4 Exchange/Replacement of Parts	62
4.4.1 Changing the Rain Sensor	Fehler! Textmarke nicht definiert.
4.4.2 Changing the GPS Receiver	62
4.4.3 Changing the Temperature and Humidity Sensors Fehler! Textmarke nicht definiert.	
4.4.4 Changing the Microwave Window Sheets	63
4.5 Preventive maintenance	66
5 Trouble Shooting	67
6 Spare part list	68
7 Radiometer dimensions	70
8 Safety Instructions	71
8.1 Operation Safety Issues	71



1 Scope of this document

This document describes all processes needed for installing and setting up the standard RPG radiometer models. The target audience is mainly the engineering and support personnel who are in charge of the initial installation, maintenance, station supervision, calibration, cleaning and repairs. All the technical aspects of such tasks are covered. In addition, the basic operations of how to start a pre-defined measurement and how to stop a measurement and shut down the instruments are explained.

The procedures in this document apply to single-polarization radiometers of HATPRO types (profiling radiometers RPG-XXXPRO series), LWP multi-channel radiometers (RPG-LWPXXX series) and Tau/Tipping radiometers (RPG-Tau-XXX).

What is not covered here (but in other manuals for standard radiometers) is:

- Theory of operation, scientific background (Operational Manual)
- Software details and how to define a measurement (Software Manual)
- Measurement Examples
- Deployment Examples

Furthermore, all dual-polarization instruments (RPG-XCH-DP) are not described here, but in a separate set of manuals.

2 Setup and Installation

This chapter covers the complete installation of the radiometer up to the point of starting operations.

2.1 Choice of location

The location for a radiometer installation needs to comply with several requirements in order to guarantee successful recording of valid data. The following list of requirements shall be matched:

- Flat and stable grounds to support 100 kg of weight (plus personnel), preferably a concrete base plate or a flat rooftop.
 - If vegetation covered soil or bare soil is chosen, then some extra provision is needed to prevent the radiometer stand from sinking into the ground.
 - If the surface does not allow the mounting of steel cables to tie the radiometer to the ground, then the radiometer stand needs to be loaded with extra weight
- The view to the horizon should be unobstructed by trees, fences, and buildings into at least one direction (for radiometers without azimuth positioner it needs to coincide with the main scan direction indicated by orange arrows on the housing).
- For sky scanning, a significant distance from obstacles like houses and trees is beneficial.
- The distance from the radiometer to (a) power outlets and (b) the location of the controlling host PC should match the length of the cables ordered with the radiometer
- A safe routing option for the cables (outdoor indoor) should exist. The power cable diameter is 12 mm, the data cable is a fiber optical cable which needs to be handled with great care. The fiber optics connectors are even bigger (up to 10cm). Pushing and pulling the cables can lead to a malfunction of the cable performance.
- To avoid in-band RFI, the user may want to check for radars and telecommunication links directly in the observation bands (22 GHz to 32 GHz, and 51 GHz to 59 GHz).



2.2 Unpacking the radiometer and accessories

The following standard components are delivered in addition to the radiometer:

- Instrument stand with adjustable feet
- External absolute calibration target (cold load)
- Air flow reduction for winter operation of thermal stabilization system
- Connector protectors
- Interconnecting cables (main power, fiber optics data interface cable), 60 m long (default)
- Powerful dew blower system + heater module
- USB drive with complete host software folder for easy software installation on
- Microsoft Windows® operating systems.
- An optional infrared radiometer
- An optional azimuth positioner

2.2.1 Radiometer Box

The radiometer system is shipped in up to four flight cases. One contains the radiometer itself (Fig.2.2.1) while the others contains all accessories needed to operate and calibrate the instrument. The radiometer case is fastened to the container by two straps as indicated in Fig.2.2.1. GPS-clock are not disassembled from the radiometer box for packing.

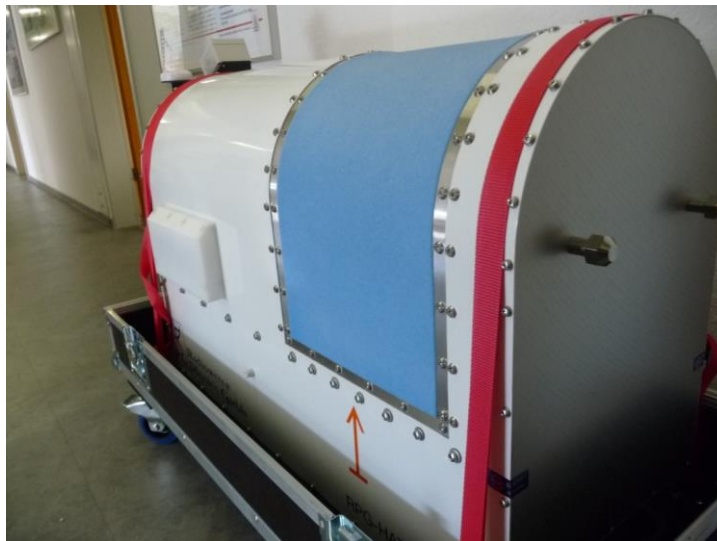


Fig.2.2.1: Radiometer packed to the transport container's base plate.

2.2.2 Accessories



Fig.2.2.2: Accessory boxes with radiometer stand, calibration target, heater module, cables, IR Radiometer and azimuth drive.

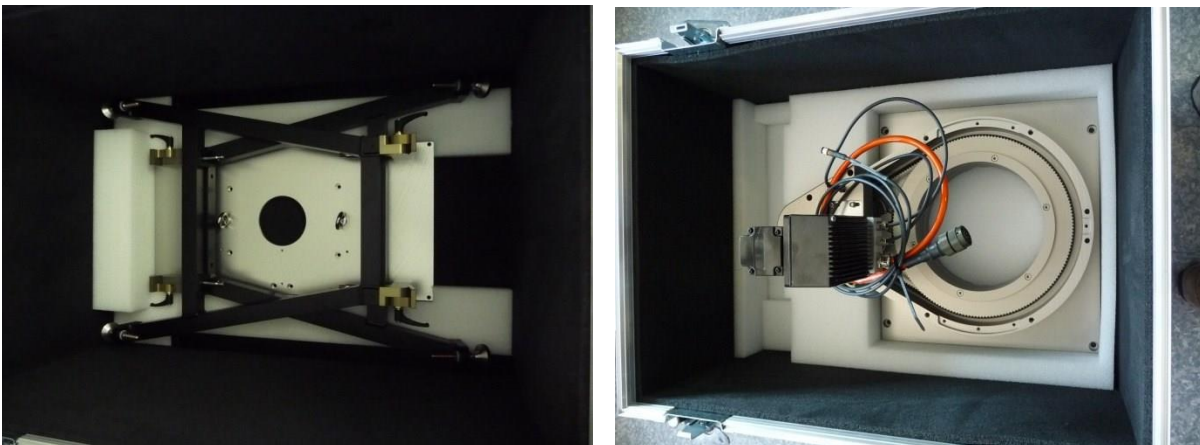


Fig.2.2.3: Folded stand and azimuth turn table both packed to their container.

The radiometer stand and calibration target are both fastened to the box' side walls with ribbons as indicated in Fig.2.2.3.

2.3 Setup the Instrument Stand

The instrument stand is packed folded with the four feet mounted to the stand's legs.

Lay the folded stand on the top side of the table plate (Fig.2.3.1). Please use a soft underground or mat to prevent the table surface from being scratched.

The two leg pairs are clamped by two clamps with black steel handles each. Open the clamps to turn the two leg pairs into upright position. The leg pairs should be pushed outside as much as possible (see Fig.2.3.2b)). Then fasten the clamps firmly (Fig.2.3.2a)) and turn the stand to its normal orientation, with the table surface pointing upwards.

Unpack the two black stabilizing bars (Fig.2.3.3a)) and the four mounting nuts (Fig.2.3.3b)). Then push the two bars onto the stand's cross-beam threaded bolts as in Fig.2.3.4a) and fasten them with four special nuts (Fig.2.3.4b)). There are no special tools needed to set up the stand.

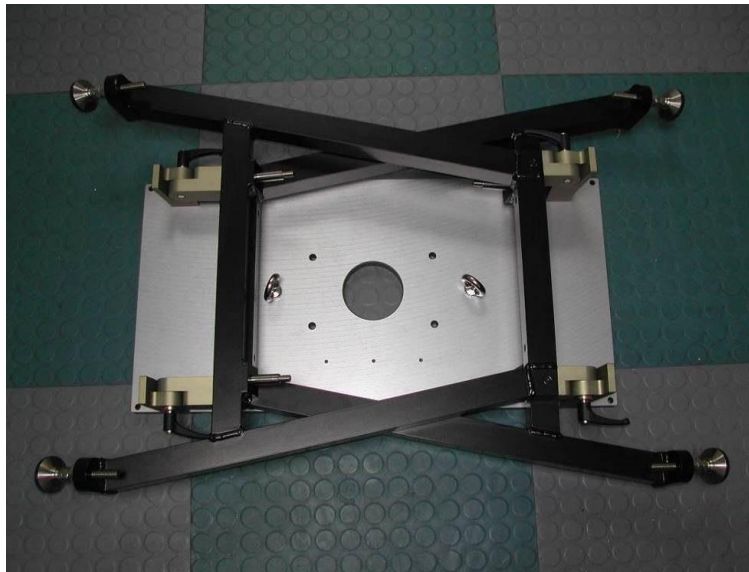


Fig.2.3.1: The folded stand.



Fig.2.3.2: Open clamps and turning legs into upright position.



Fig.2.3.3: Stabilizer bars and mounting nuts.

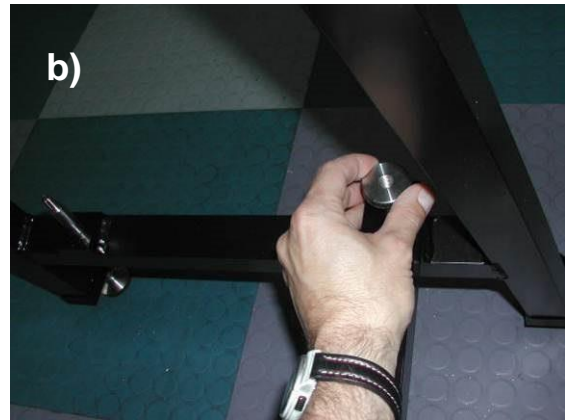
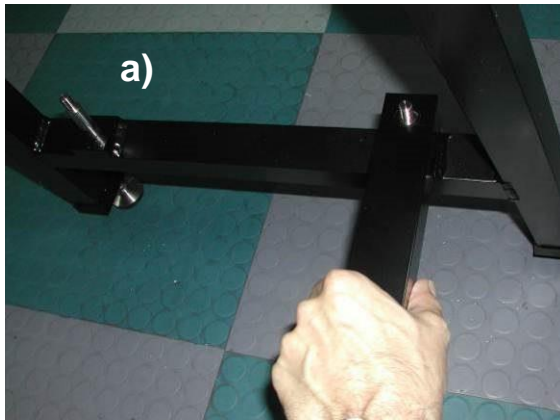


Fig.2.3.4: Mounting the horizontal stabilizer bars.



Fig.2.3.5: Completely mounted stand.

Finally, the stand should be horizontally aligned. For this purpose, 4 spirit levels are located on the table plate's edges (Fig.2.3.5a)). Loosen the upper nut and adjust the feet as indicated in Fig.2.3.5b) for horizontal alignment.

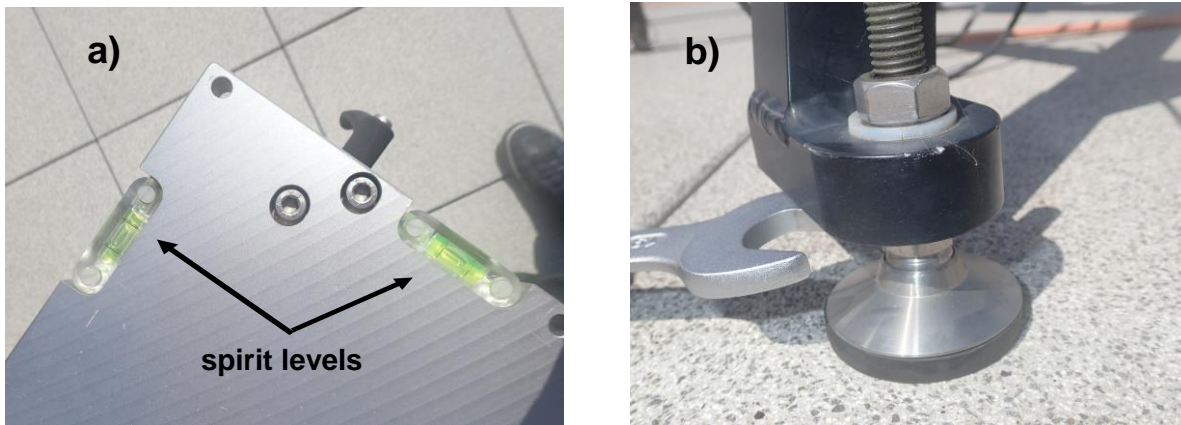


Fig.2.3.5: Spirit levels on table base plate for horizontal adjustment of the stand.

Without this adjustment, the reading of the elevation axis during measurements is not equivalent to the real observation elevation angle. The inclination angles of the elevation axis and the direction normal to it are adjusted by inspecting the spirit levels attached to the stand's table and changing the stand's 4 individual feet lengths (M19 wrench required).

2.4 Setup of the Azimuth Positioner (Optional)

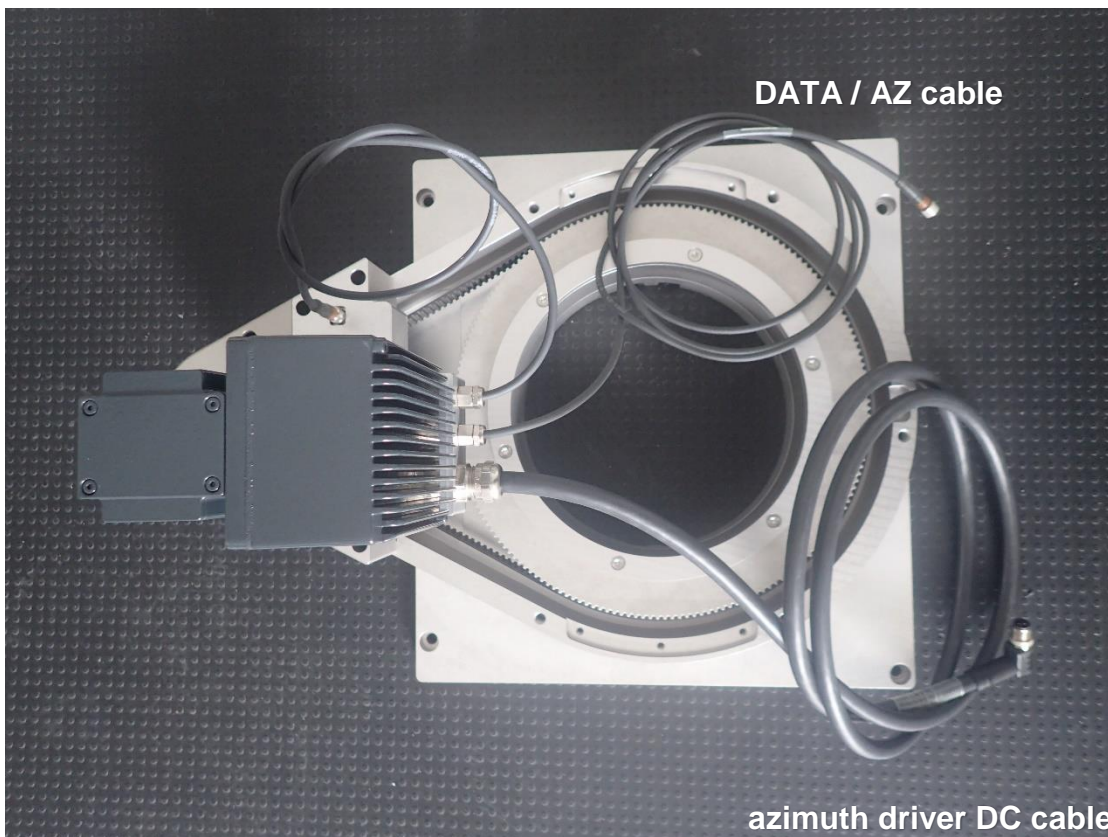


Fig. 2.4.1.: Azimuth positioner

The azimuth positioner is an optional equipment which is required when the radiometer shall perform full sky scanning or other scanning patterns.

After unpacking the azimuth drive and laying it on its table plate, the sub-unit looks like in Fig.2.4.1. Two cables are important for the later installation steps: The driver's DC power cable (thick black cable) and the controller's cable (thin black cable), labelled 'DATA / AZ'. When the azimuth drive is mounted on top of the stand, it is important that the two red arrows, as indicated in Fig.2.4.2, are located on the same side.

Fix the azimuth drive with 6 screws (M8, 25 mm thread length) from the bottom side of the stand's plate (see Fig.2.4.3).



Fig.2.4.2: Azimuth positioner on the stand's table plate.



Fig.2.4.3: Fixing the azimuth drive with 6 M8x25 screws.

Fix the power splitter unit (Fig. 2.4.4.) with 2 screws (M6, 20 mm thread length) to the bottom side of the stand's plate as shown in Fig. 2.4.4.

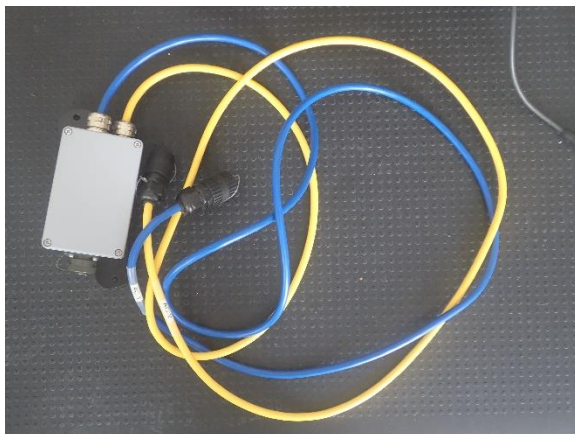


Fig. 2.4.4.: Fixing the power splitter unit to the bottom side of the stand with 2 M6x20 screws.

Unscrew the black plastic brackets (Fig.2.4.5) on the top of the azimuth table. The cable channels are labeled with the cable designations as shown in Fig.2.4.6a),b).

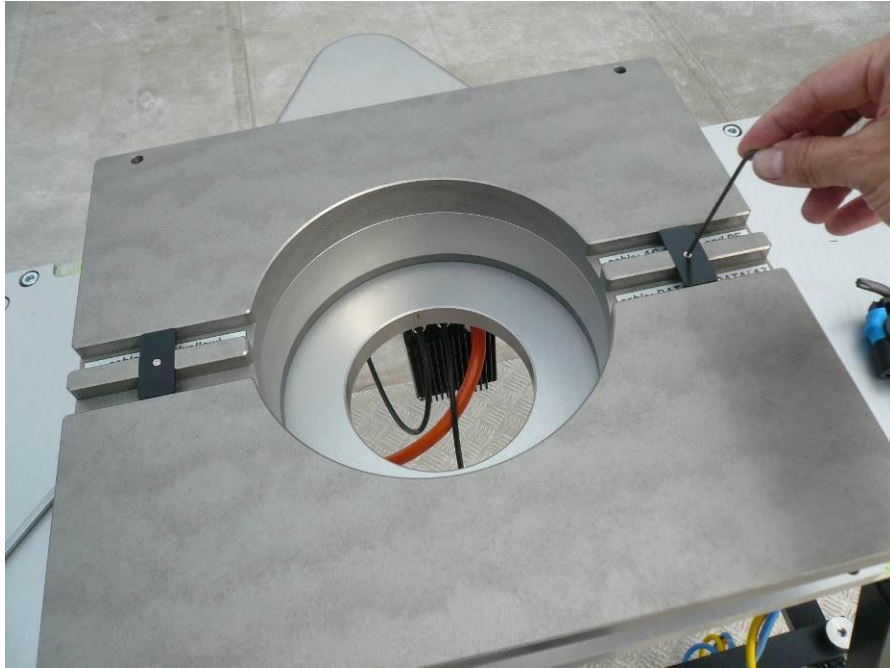


Fig.2.4.5: Plastic brackets on cable channels.

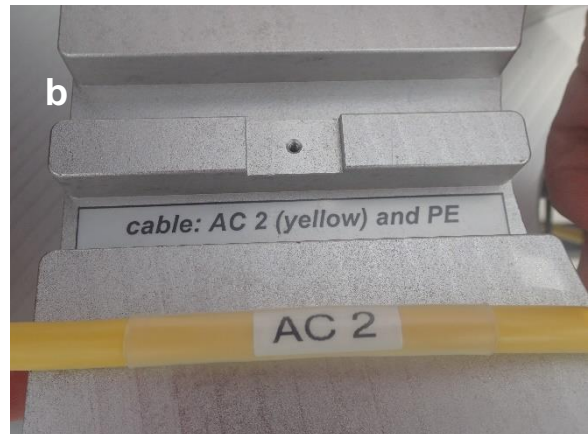


Fig.2.4.6: Labeled cable channels for a): AC1 cable (blue), DATA/AZ cable (black), fiber optics DATA cable (black) and DC/AZ cable and b): AC2 cable (yellow).

Now feed the AC1 cable (blue), AC2 cable (yellow), the DATA/AZ cable (black), the fiber optics data cable and the DC/AZ cable (see Fig. 2.4.7 AC1 cable as example) through the central azimuth drive hole from the bottom table side to the top.



Fig. 2.4.7. Feeding AC1 cable through center hole. Do the same for AC2, DATA/AZ, fiber optics data and DC/AZ cable.

Thread the different cables into their associated channels and mount the black plastic brackets (Fig.2.4.8).


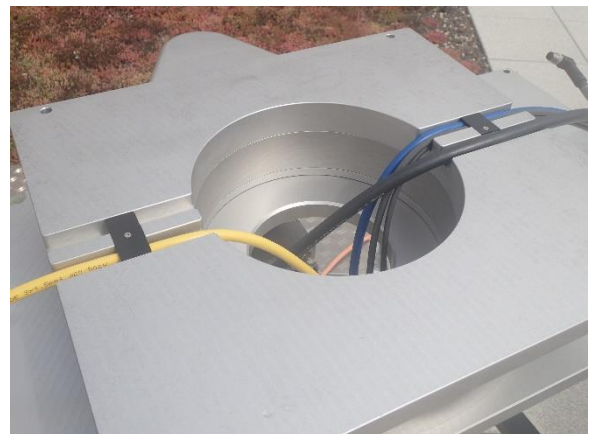


Fig.2.4.8: Mounting the cables into the cable channels.

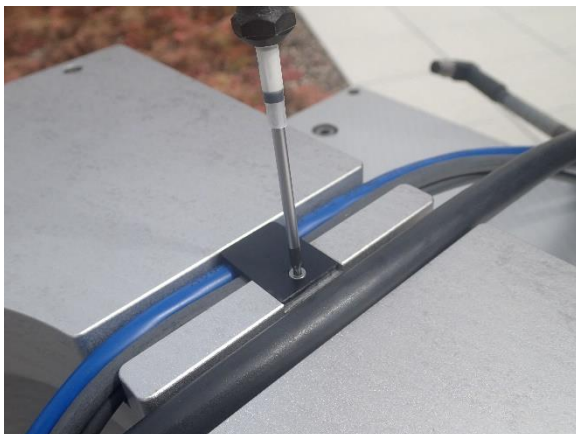

2.5 Mounting of Radiometer Box

After the installation and adjustment of the instrument stand and optional azimuth positioner, use the handles to lift the radiometer box on the azimuth table (Fig.2.5.1) if the optional azimuth drive is installed, or directly on the stand's top plate, if no azimuth positioner is used. The radiometer box has to be oriented, so that all red arrows are on the same side. Whenever lifting the radiometer box, the dew blower must be removed from the radiometer before (see section 2.6.1).

For fixing the radiometer box on the azimuth table, four M8 screws (20 mm thread length) are used (Fig. 2.5.2). If the radiometer box is directly mounted on top of the stand, four M8 screws (30 mm thread length) are used.

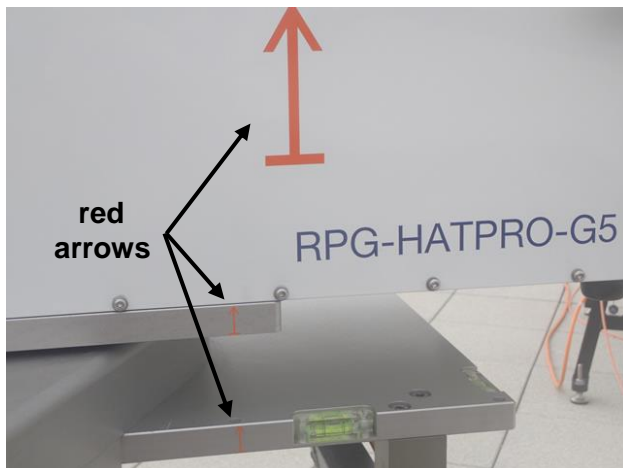
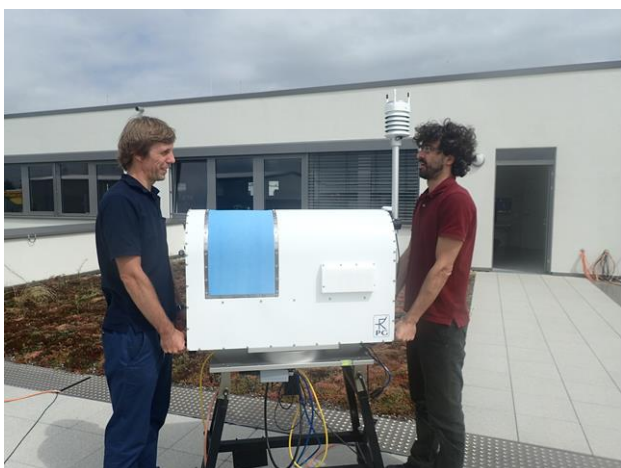


Fig.2.5.1: Use the mountable handles to position the radiometer box on the azimuth turn table. Make sure that all red arrows are on the same side.

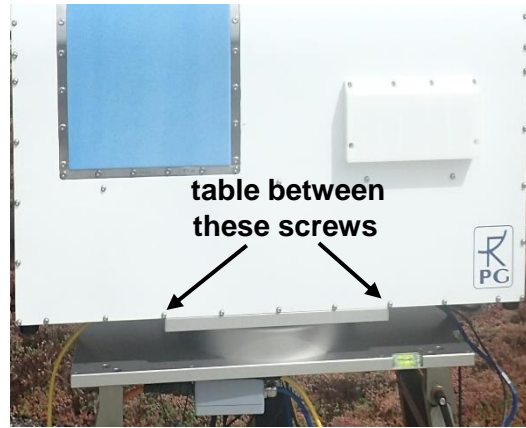


Fig.2.5.2: Four M8x20 screws for fixing the radiometer box on the azimuth driver table.



Fig.2.5.3: Use Allen key to fasten the box with four M8 screws.

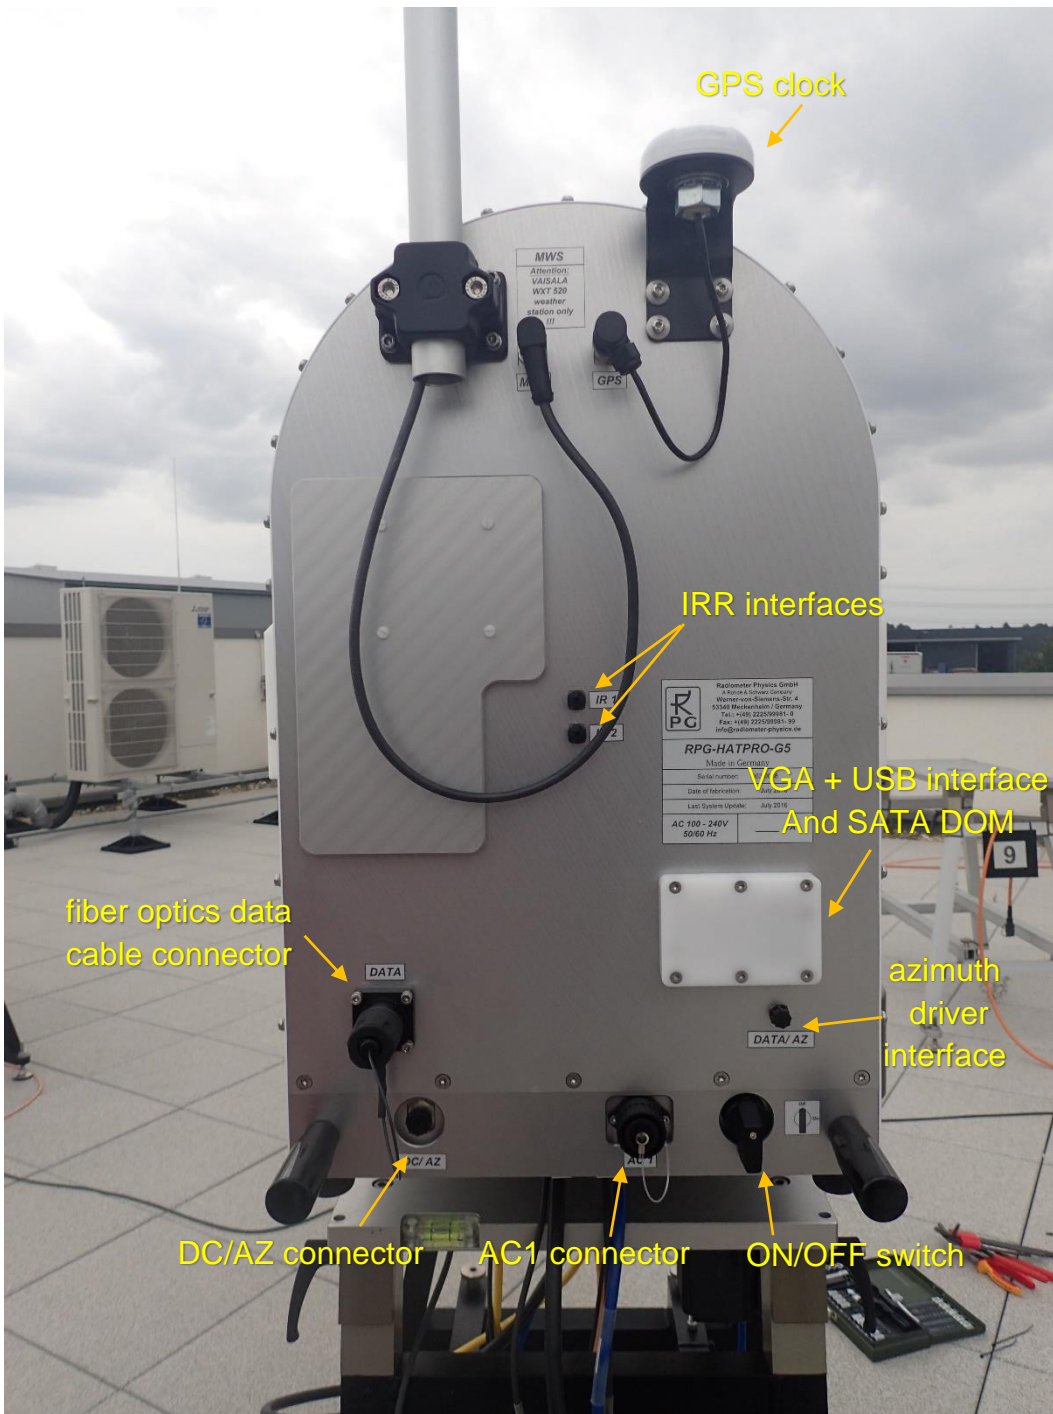


Fig.2.5.4: Connectors on the side wall.

Fig.2.5.4 shows the different connectors, switches and sensors on one of the two side walls. For transportation, all connector sockets are protected by caps.

Before connecting the AC1, DATA/AZ, DC/AZ and fiber optics cable, the connector socket protection caps must be removed. Keep these protection caps for future transportation use. If a socket is left unprotected during transportation, condensation water may accumulate inside the connector, which may lead to malfunctioning of the radiometer.

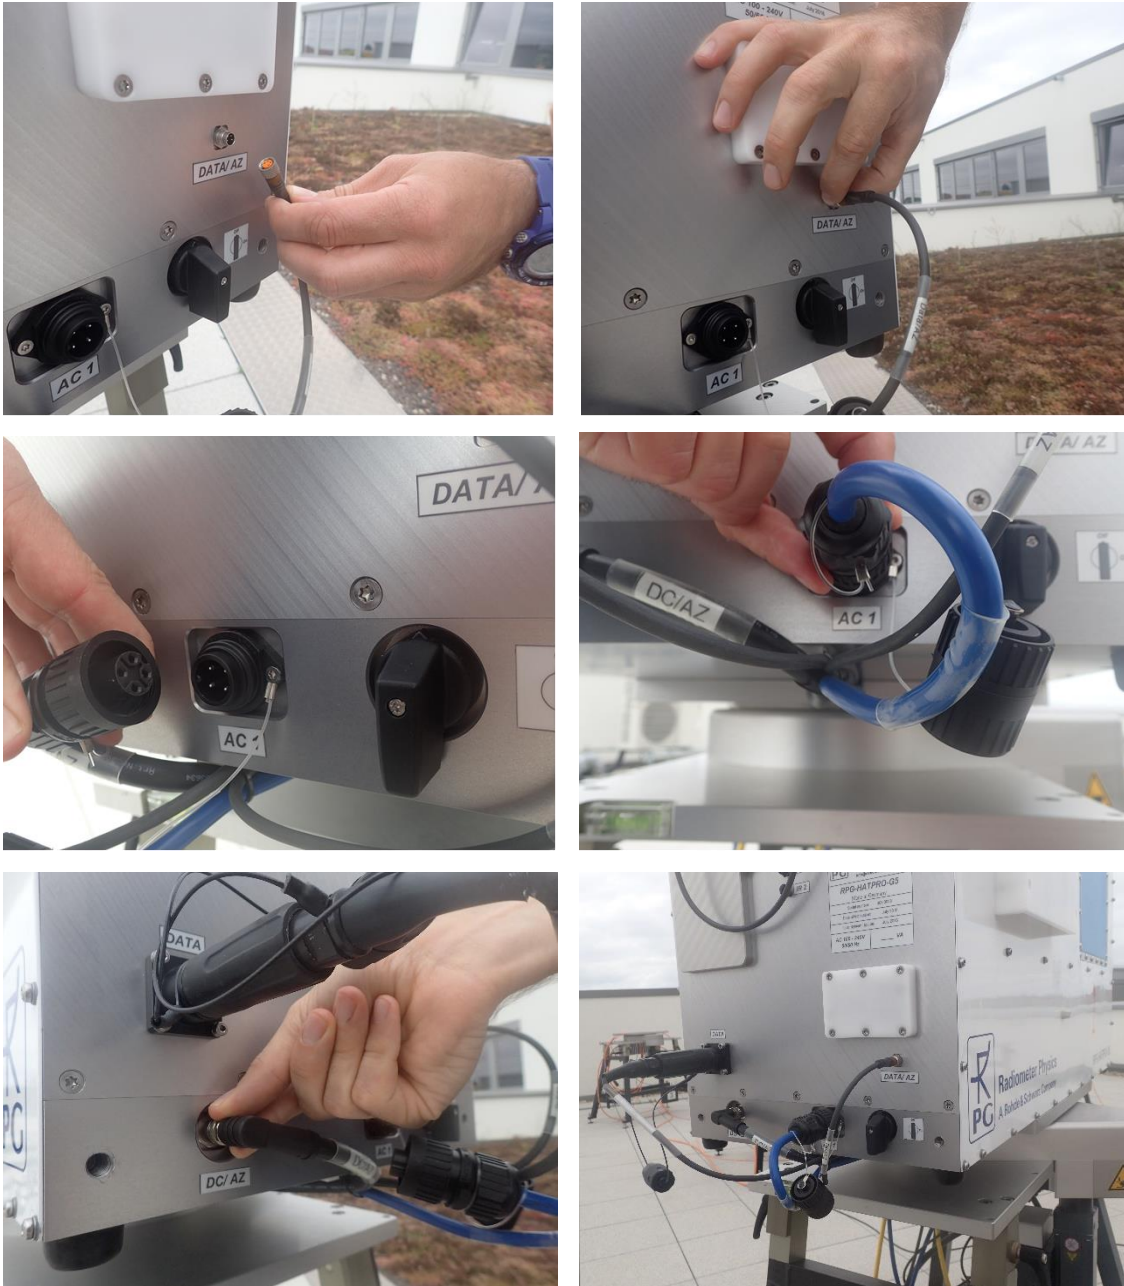


Fig.2.5.6: Connecting the blue AC1 cable, the black azimuth driver interface (DATA/AZ) and the black DC/AZ cable.

The fiber optics connector comprises collimation lenses on both fiber ends which prevent defocusing and connection loss under cold environmental conditions. Both ends are equipped with a pin and a hole which indicate how to be connected (see Fig.2.5.7). Pay attention when unscrewing the cap of the fiber optics cable, do not break it.



Fig.2.5.7: Connecting the fiber optics data cable.

After these connections have been performed (Fig.2.5.8), the cables should be pulled back to get the right length on the side wall (Fig.2.5.9). Finally they are fixed to the radiometer's bottom plate by one or two cable ties (Fig.2.5.10).



Fig.2.5.8: All cables connected to the radiometer.



Fig.2.5.9: Pulling back the cables to adjust the cable lengths.



Fig.2.5.10: Fastening cables on the radiometer's bottom plate.

2.6 Mounting of Externals (Blower, Heater, IRR, Weather Station)

2.6.1 Dew Blower

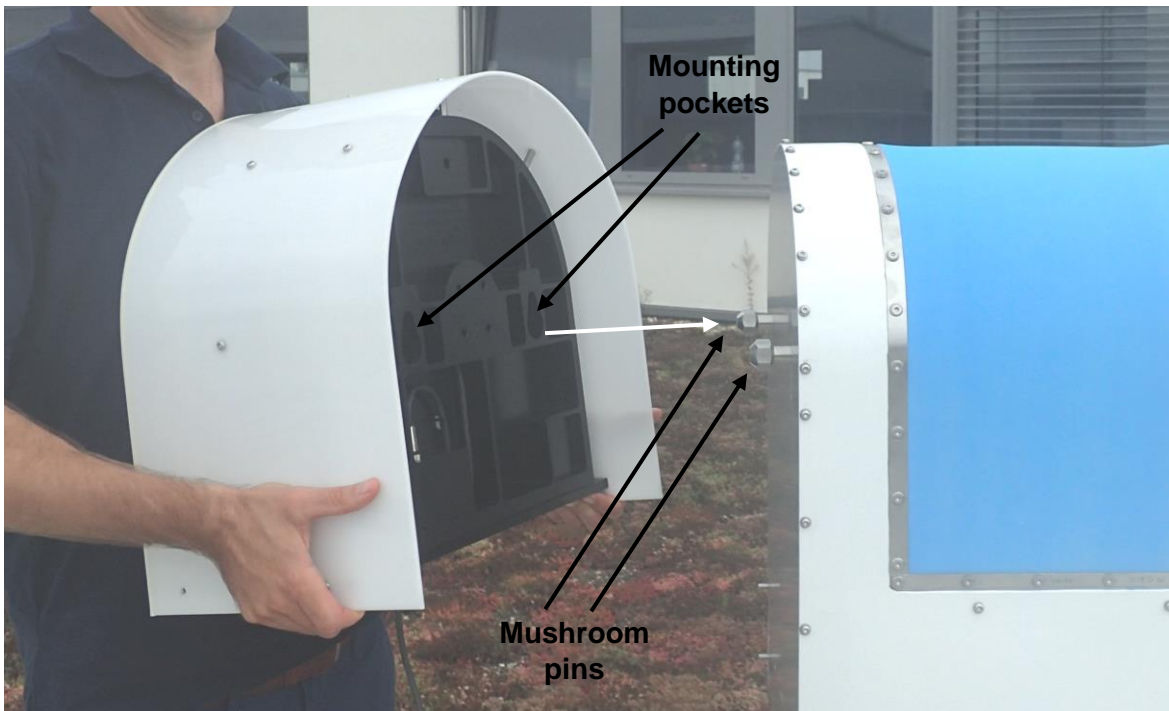


Fig.2.6.1.: Dew blower with mounting pockets.

Fig. 2.6.1. shows the dew blower with its mounting pockets. When attaching the blower to the radiometer, the mushroom pins have to slide into these pockets.



Fig.2.6.2: Sequence of movement.

The first step is to push the blower against the radiometer housing so that the mushroom pins slide into the blower's mounting pockets (1 in Fig.2.6.2). In the second step, the blower is released to slide downwards (2 in Fig.2.6.2), so that the mushroom pins get locked inside the pockets. In order to dismount the blower, the inverse movement is required, e.g. when unpacking the radiometer box (Fig. 2.2.1), the blower has to be removed from the radiometer housing in order to lift the radiometer onto the instrument stand. Each time the instrument is packed or unpacked, the blower has to be mounted or dismounted in this way.

2.6.2 Heater Module

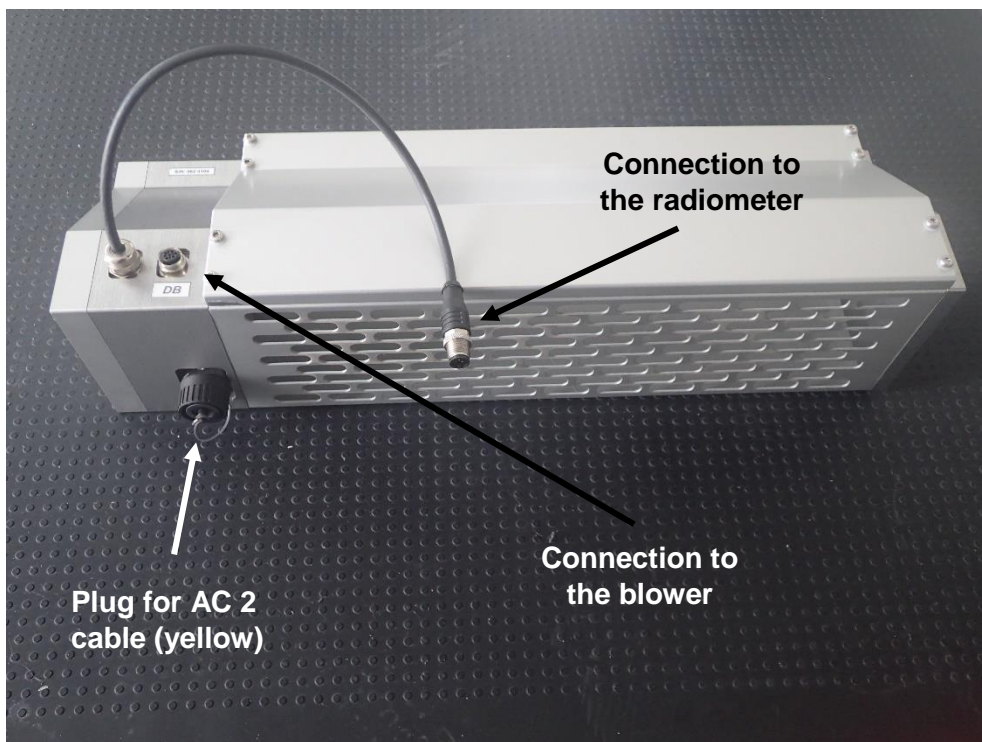


Fig.2.6.3: Dew blower heater module with mounting points.

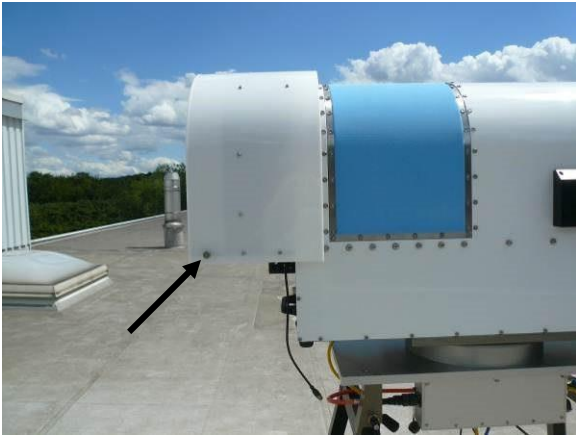


Fig.2.6.4: Remove heater mounting screws from the blower.

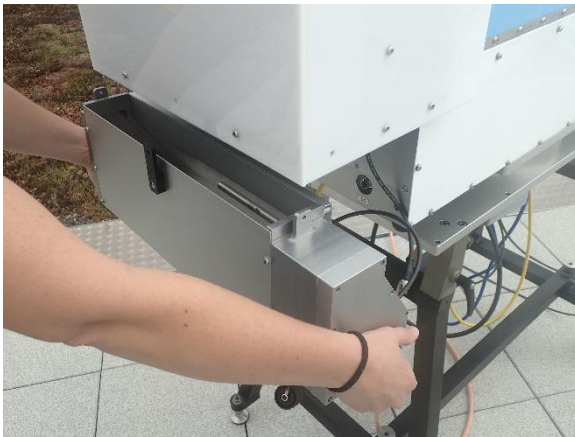


Fig.2.6.5: Shift the heater module underneath the blower's air inlet and fasten the mounting screws as indicated.

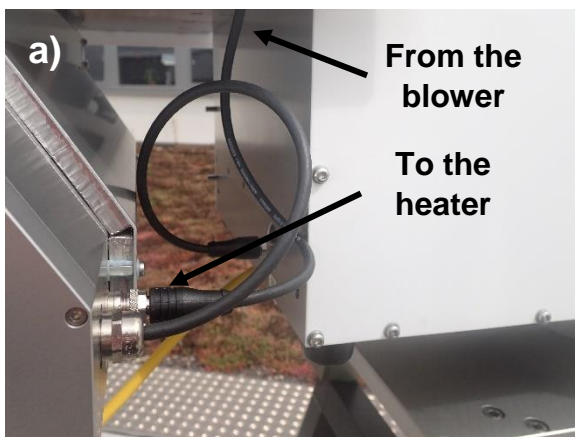


Fig.2.6.6: Connect blower supply to heater module (a) and then connect heater module to radiometer (b), 'DB' connector socket).



Fig.2.6.7: Connection of AC2 cable (yellow) to the heater module AC input.

Finally, the AC2 cable is fixed at the radiometer bottom plate (Fig.2.6.8) with cable ties.



Fig.2.6.8: Fixing AC2 cable on radiometer bottom plate and cutting the cable tie.

2.6.3 Mounting of IR Radiometer (Optional)

The infrared radiometer data is used as an additional information for retrievals dealing with cloud base height, humidity profiling, LWC profiling, etc. In order to protect the IR optics the system is operated in a tilted position (see Fig. 2.6.9)). The IR beam is reflected by a gold plated mirror to sky directions between 0° (horizontal) and 90° (zenith). This is useful when the IR data shall be combined with microwave observations under elevation angles other than zenith.

The broad band single IR radiometer (10-12 µm bandwidth) has a range of +100°C to -80°C.

2.6.3.1 Manually Adjustable IRR Elevation Axis

The standard version is a manually adjustable IR radiometer mount (Option IRR-A) as shown in Fig.2.6.9).

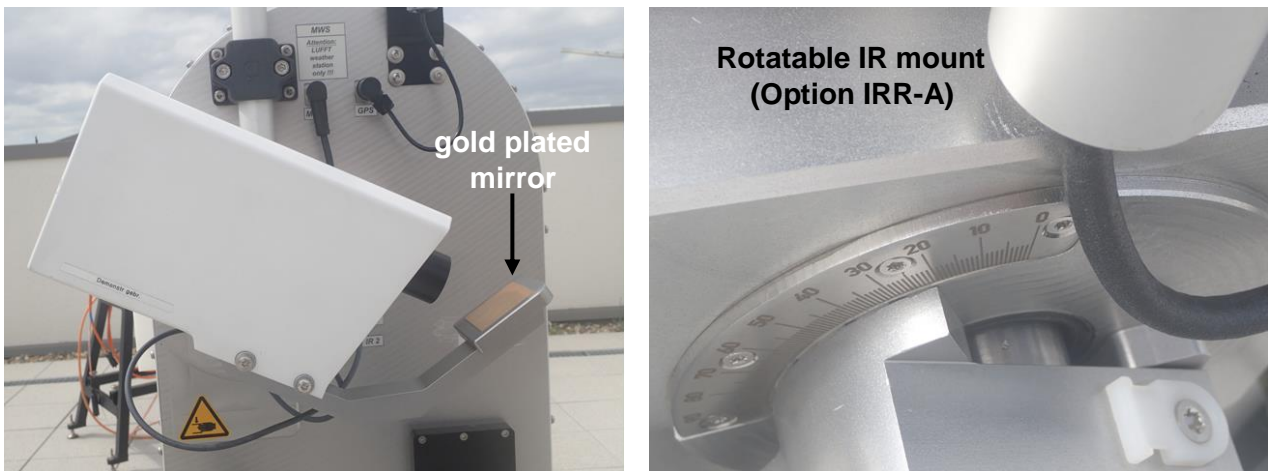


Fig.2.6.9: Infrared radiometer mounted to the radiometer side wall on manually adjustable elevation axis. Because of an axial mount the IR radiometer viewing angle can be changed between 0° and 90° and fixed at an arbitrary angle in this range.



Fig.2.6.10: Connecting the IRR to its interface port IR1.

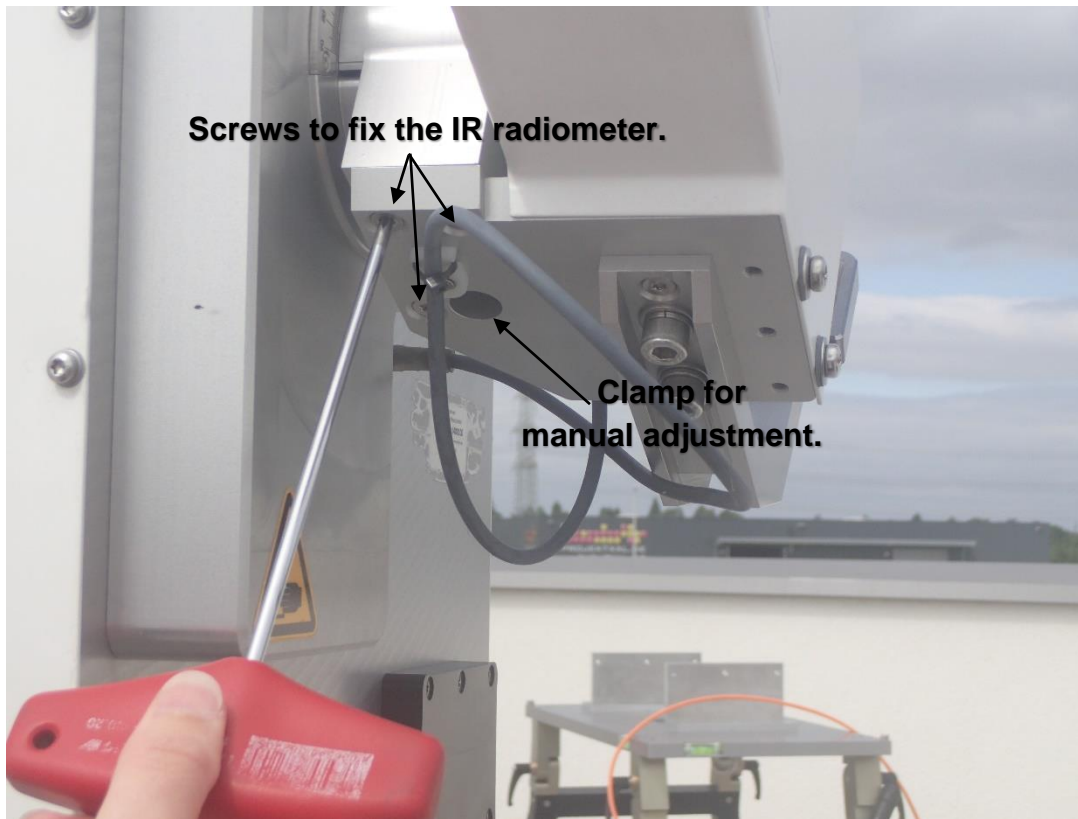


Fig. 2.6.11: Screw the IRR right with three M4 screws. The manual adjustment is then performed by loosening the clamp, rotating the IRR to the desired elevation position (use the elevation scale) and fastening the clamp again.

2.6.3.2 Motorized IRR Elevation Axis (Optional)

If arbitrary scan patterns (e.g. volume scans) shall be performed with automatically synchronized elevation pointing of the microwave and IR beams, a motor driven mount is available (Option IRR-B). This option is not a plug-and-play extension and requires a modification of the radiometer housing and electronics. If desired, this feature should be ordered together with the radiometer in order to avoid additional costs in a later upgrade.

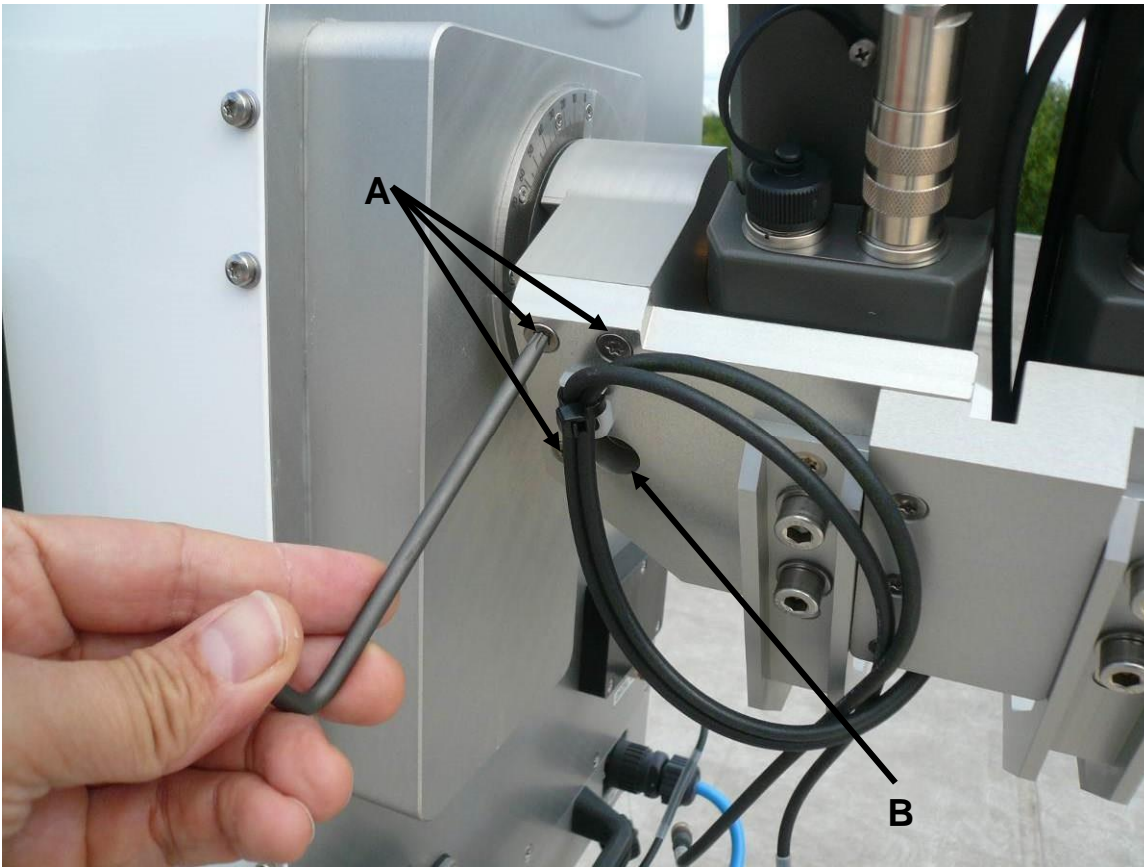


Fig.2.6.12: For the motorized IR-Option (Option IRR-B), the IR radiometers are mounted with three M4 screws (A). NEVER touch the screw in (B). It has been adjusted to an elevation axis tilt accuracy of 0.3°. By loosening (B), this adjustment is lost.






Fig.2.6.13: Also fasten the IR-interface cables with a cable tie.

2.6.3.3 Mounting of Improved IR Protection Housing (Optional)

Since March 2015, an improved protection housing for the IR radiometer is available (please contact RPG for ordering code). The housing efficiently protects the sensitive parts as IR lens and reflecting mirror from dust, rain drops and snow / icing.



The upgrade kit consists of two separate sheet parts (A) and (B) and four screws (C).

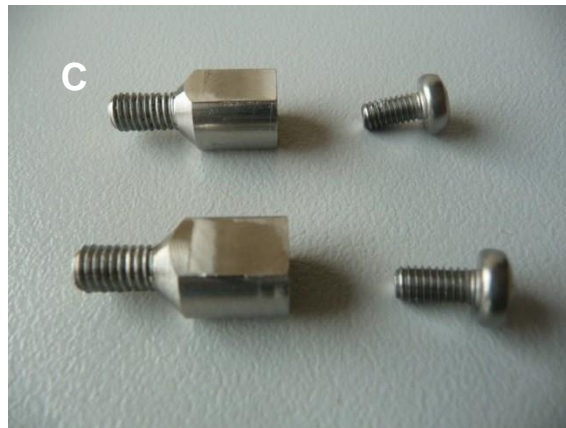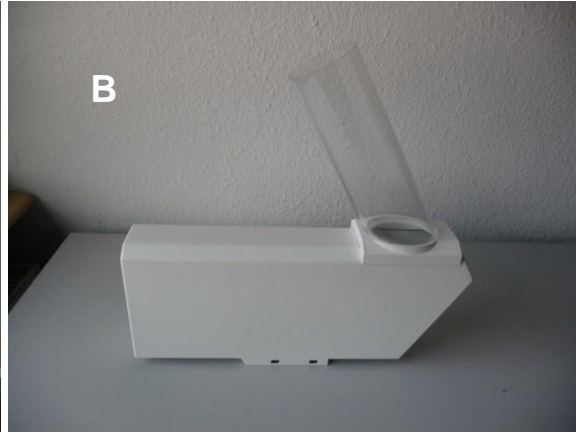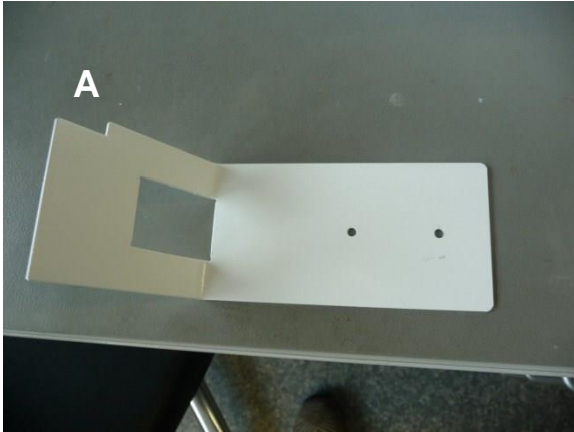

1. First of all, remove the reflecting mirror and put the sheet (A) over the reflector carrier as indicated in (D).






2. Replace the two screws holding the reflecting mirror, by the extension screws in (C). Use a metric 8 mm wrench to fasten the extension screws.



3. Mount part (A) with two screws to the extension screws.

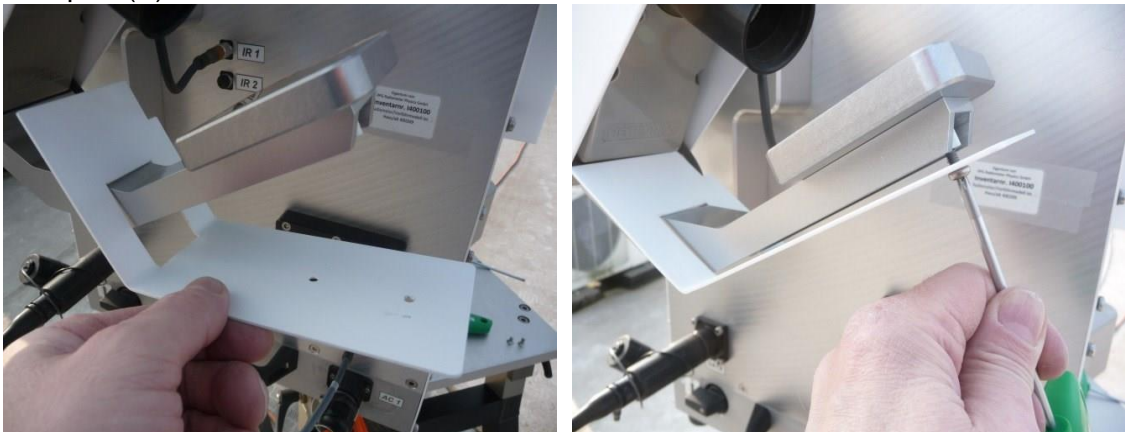

4. Remove the old housing.





5. Slide the new housing (B) over the IR radiometer and fasten it as indicated.



2.6.4 GPS Clock



The GPS clock are not dismounted for transportation.

2.6.5 External Weather Station

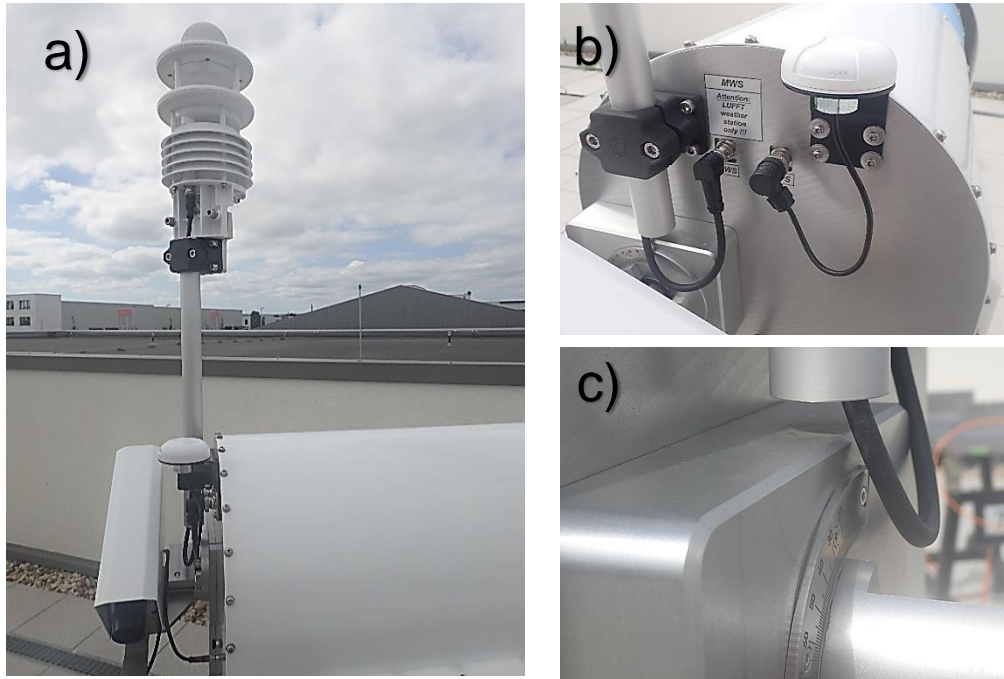


Fig. 2.6.5.1: a) External weather station Lufft WS600-UMB, b) clamp for fixing and connector socket, c) leave enough space for the cable when mounting the pole.

The external weather station Lufft WS600-UMB is mounted to a 1.2 m long pole which is clamped to the radiometer housing by a black clamp block (Fig. 2.6.5.1b). Leave enough space for the cable when mounting the pole (Fig. 2.6.5.1c).

The electrical Lufft WS600-UMB connector socket is right to the clamp (Fig. 2.6.5.1b).

Rotate the steel pole until the N mark (North) on the Lufft WS600-UMB is pointing to the same side where the red arrow under the microwave window is located (Fig. 2.6.5.2). Then tighten the clamp. If an azimuth drive is installed and the radiometer rotates around the azimuth axis, the wind direction is automatically corrected for the radiometer azimuth.

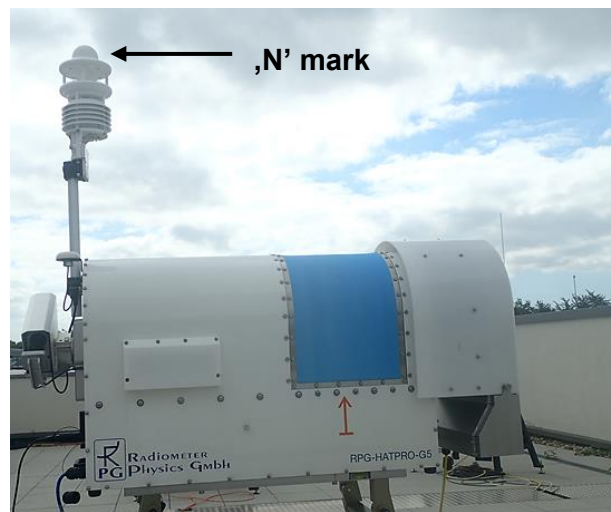


Fig.2.6.5.2: Orientation of north mark "N" relative to the radiometer observation side, marked by the red arrow.



2.7 Fibre Optics Converter

The one end of the fiber optics system is described in section 2.5 (see also Fig. 2.5.7). The other end of the fiber cable is connected to a MOXA Fiber-to-LAN-TCP/IP converter as indicated in Fig.2.7.1. Each of the two line ends has a nose (see Fig. 2.7.2) which has to fit into the fiber socket. After the connector is sliding into the socket (the nose guided by the slit), the bayonet coupling has to be pushed against a spring inside the coupling and then turned clockwise.



Fig. 2.7.1: MOXA Fiber-to-LAN-TCP/IP converter.

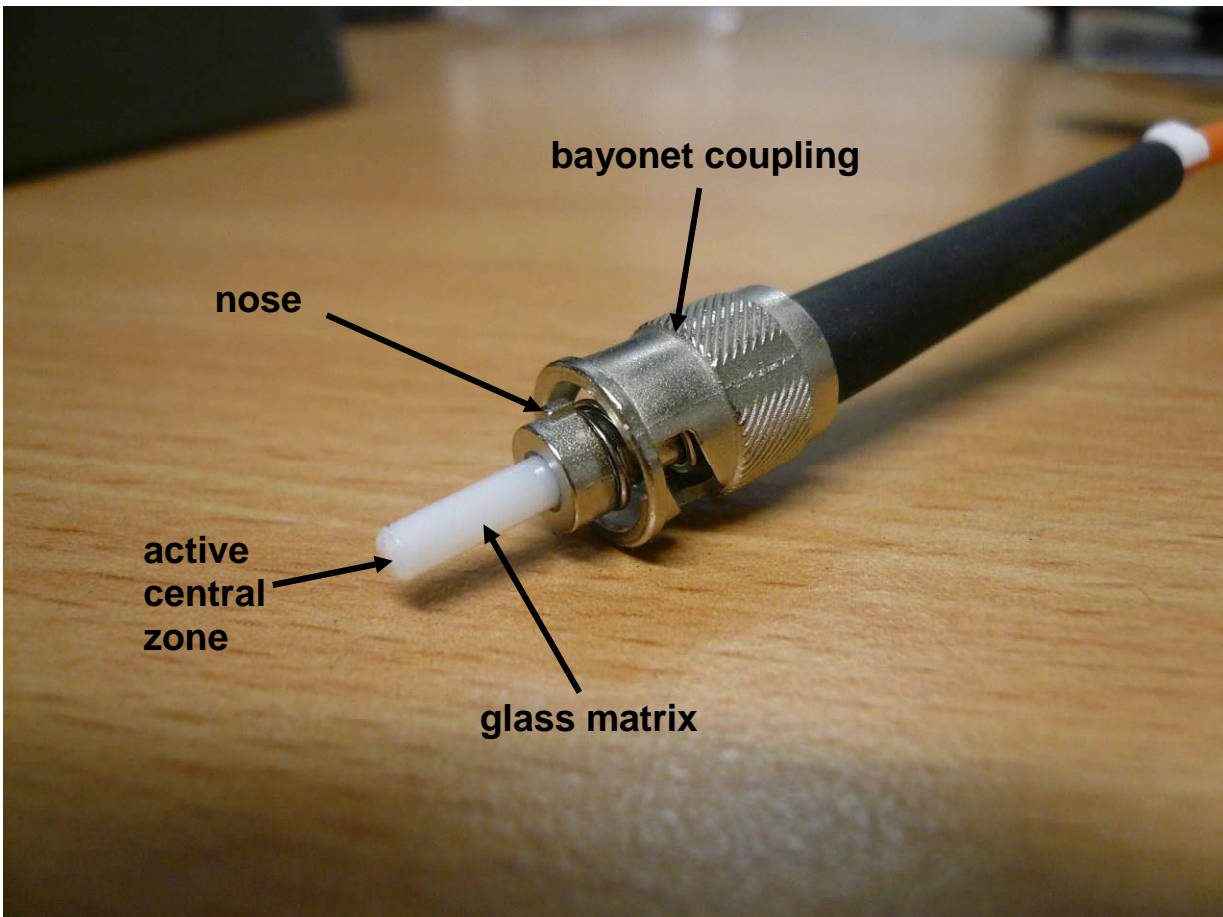


Fig.2.7.2: Details of the glass fiber connector.

The converter has an external power cable. When power cable and the two fiber lines are connected the power LED and FX LED are turned on (see Fig. 2.7.3a). Make sure that the TX fiber line (orange) gets connected to the TX converter output and the RX fiber line (blue) to the RX converter input. Via LAN-TCP/IP connection the converter can be connected either directly to the Host PC or to a network. If the LAN cable is connected (see Fig. 2.7.3b) the power and FX LEDs are on and the 100M and TP LEDs are flashing.



Fig.2.7.3: 2 line fiber optics to LAN-TCP/IP converter.

2.8. Electrical Connections

The radiometer power cable is split into AC1 (supply for radiometer, blue) and AC2 (supply for blower heater module, yellow). AC1 can be buffered via a UPS system (see Fig.2.8.1) in the range 100-240 V/AC, 50-60 Hz. AC2 must be connected directly to a power outlet at 220 V/AC or via a 110-to-220 V transformer to a 110 V/AC power outlet. The heater will not be damaged if it is connected to a 110 V/AC line, but the heater power is reduced from its standard 1800 Watts down to 450 Watts in this case. 450 Watts of heater power is not efficient enough for drying the microwave window. For 110 V/AC outlets, it is therefore recommended to use a transformer to produce 220 V/AC to power the heater.

The fiber optics data cable is more sensitive to mechanical stress than a usual copper cable and in the case of damaging, it needs to be repaired by a specialist. Certain treatments of the fiber optics cable should be avoided in order to maintain the functionality of the cable (see Fig.2.8.2), like pulling the cable with strong force or like stepping on it.



Fig.2.8.1: Summary of connections

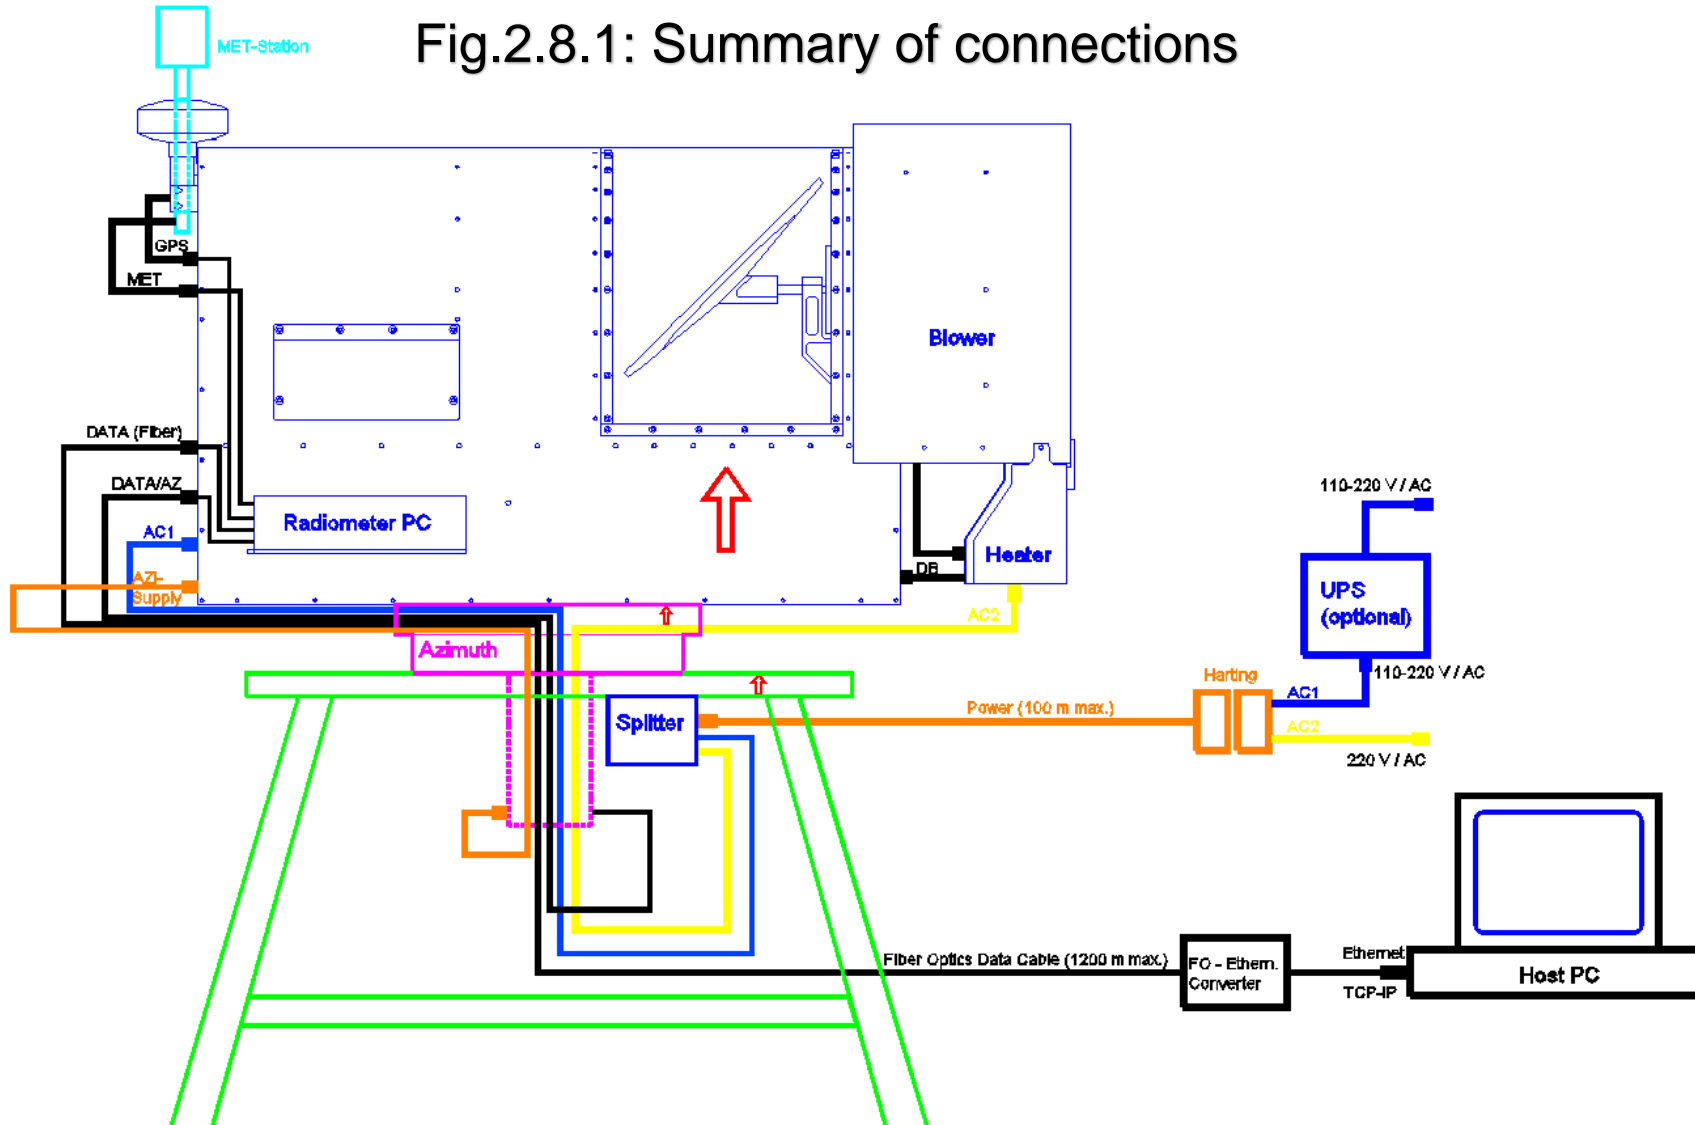




Fig.2.8.2: Avoid loops in the fiber optics cable. The curvature radius should not be less than 5 cm. Crossings of cables can lead to cable damage when stepping on it.

2.9 Recommendations for Viewing Directions and Angles

Fig.2.8.1 and 2.8.2 show the requirements for the free viewing ranges. When sky-dip (tip curve) calibration is enabled, the radiometer performs an elevation scan from zenith to 20° elevation. No obstacles should be in that viewing range to ensure a good calibration.

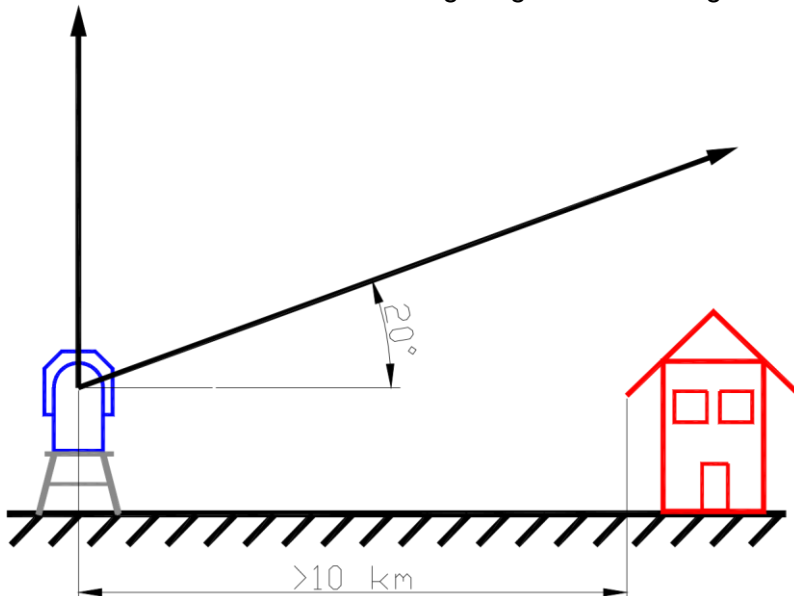


Fig.2.8.1: Tip curve calibration viewing range.

For boundary layer temperature profiling the instrument performs an elevation scan between zenith and 5° elevation angle. No obstacles should block the beam within a distance of 1 km.

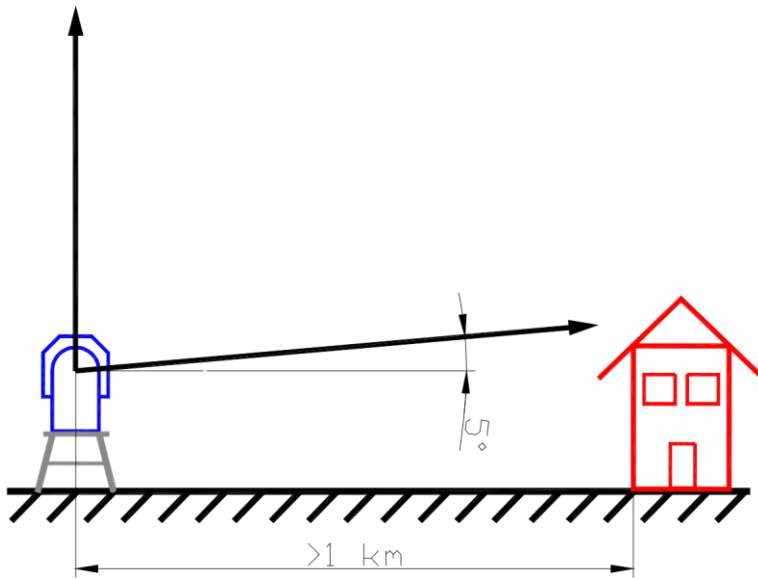


Fig.2.8.2: Boundary layer scan viewing range.



3 Quick Start Guide

This guide is meant to explain how to switch on the instrument and execute pre-defined measurements, and reversely terminate measurements and switch off the radiometer.

All details about how to define measurement modes, using the operating software, handling the data etc. is beyond the scope of this manual and will be covered in the software reference manual.

3.1 Safety precautions

Before powering up any part of the hardware, it is important to consider guidelines for safe operation (meaning the instrument as well as the operators). In addition to the guidelines given here, the user should use **common sense** precautions to prevent damages to personnel and equipment.

3.1.1 Safety of the instrument

The radiometer should be handled with the same care as other electronic equipment. The radiometer shall be protected from fire, over voltages (e.g, lightning or malfunctions in the electric networks), falling/flying objects (debris during hurricanes, typhoons, and tornados), physical forces, shock and vibration at levels which would be harmful to computer hardware or other sensitive electronic lab equipment.

The safe environmental parameters for **transport and storage** are:

Parameter	Range
Temperature	-40 °C to +50 °C
Humidity	1% to 100% relative humidity
Pressure	300 hPa to 1300 hPa
Vibration	< 10 g acceleration
Shock	< 20 g acceleration

The safe environmental parameters for **operation** are:

Parameter	Range
Temperature	-40 °C to +50 °C
Humidity	1% to 100% relative humidity
Pressure	300 hPa to 1300 hPa
Vibration	< 1 g acceleration
Shock	< 10 g acceleration

The warranty of the instrument is void if the instrument will be opened, or if the electronics parts inside the instruments are modified, or if the cables are not handled properly, or if the connection to power supply and data interfaces is not according to the specified standards (the power supply should be 100 V to 230 V/AC with 50 to 60 Hz).

Any malfunctions and failures arising from operating the radiometer and its accessories (including cables and controlling host PC) outside of the specified environments, are not covered by the



instrument warranty. Damages (and consequential damages) from either violating the radiometers physical and electrical integrity, or arising from third parties (including animals, e.g. bird attack to the microwave window) are not covered by the radiometer warranty.

3.1.2 Safety during liquid nitrogen calibrations

During liquid nitrogen (LN2) calibrations, all persons handling the LN2

- shall be trained in the handling of LN2
- shall wear suitable protective gloves
- shall wear protective glasses / goggles
- shall wear a protective apron

Failures to comply with these safety measures result in a significant risk of freezing injuries from the cold temperature of liquid nitrogen (close to -200 °C).

3.1.3 Safety considerations with moveable parts (azimuth, elevation)

In addition to the normal common-sense precautions when handling electric equipment and heavy equipment, the user needs to avoid injuries from moving parts. If the radiometer is equipped with the optional azimuth positioner, which allows rotating the whole instrument from 0° to 360°, all persons should stay away from the radiometer by at least one meter. This safety distance ensures that no one gets his hands or similar in between the moving radiometer and the non-rotating instrument stand.

3.2 Power up

After successful installation (including the wiring, power and data connection), the instrument needs to be turned on. The main switch is located in the lower left corner of the radiometer's side wall, see Fig.3.2.1.

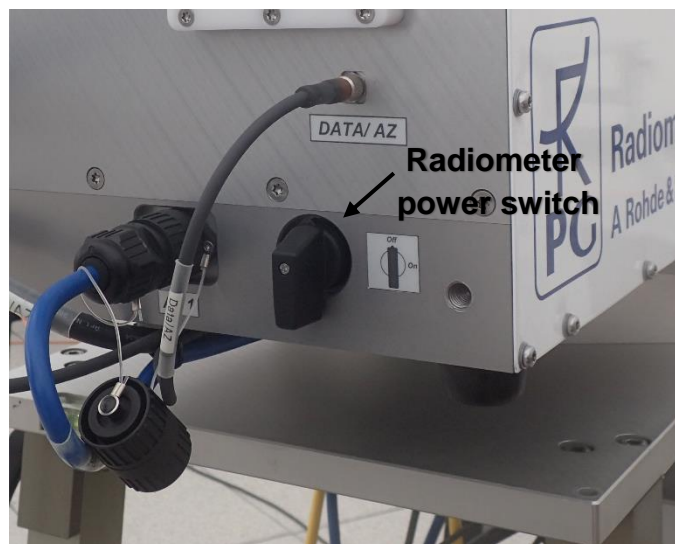


Fig.3.2.1: Radiometer power switch in OFF position.




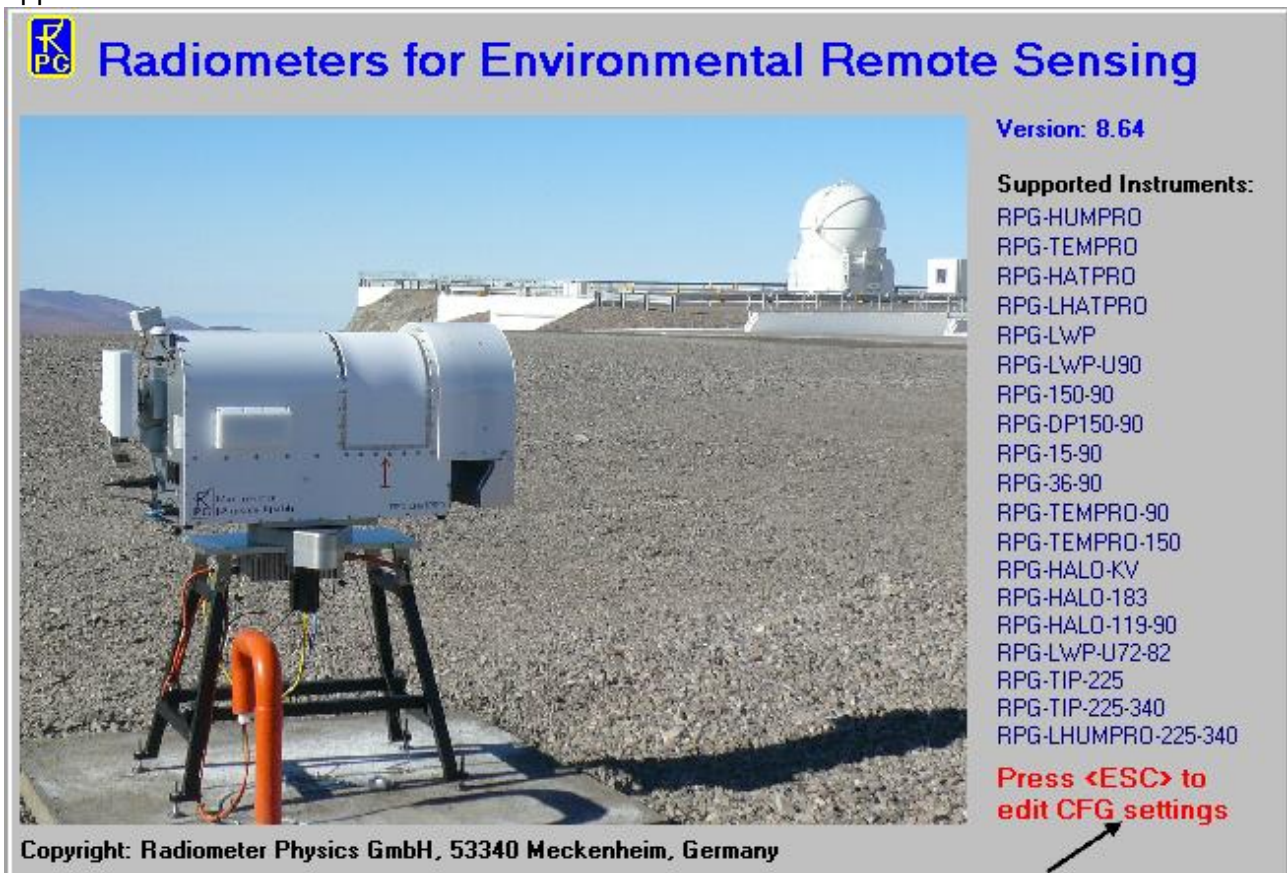
After turning the switch to the ON-position, the radiometer initializes all interfaces. If an azimuth positioner is installed, the table will turn to its zero index position. Also the microwave mirror inside the radiometer box is adjusted. The motor movement can usually be heard when standing close to the radiometer. The blower, which can run on two speeds, will shortly be switched to full power mode during the initialization phase.

Once powered up, the radiometer enters into the temperature control loop for stabilizing the receiver board temperatures. It is recommended to keep the radiometer switched on and thus in temperature stabilized conditions at all times. The hardware is designed in such a way that we expect it to operate for years uninterrupted. The only reason for switching it off is a severe damage, water in the radiometer, problems with the power supply or for transportation purposes.

3.3 Connect Host to Radiometer

After switching on the radiometer, the control software needs to be started on the host PC.

When clicking on the desktop icon  to start the host software, the following introduction window appears:



It displays the current software version number, a list of supported RPG radiometer models and (in red) a hint to press <ESC> if you want to change some of the starting configuration settings (black arrow). By pressing <ESC> during software start, the user enters a menu where he can overwrite some settings of the automatically loaded configuration file **R2CH.CFG**. This can be very useful,



e.g. when the host software is configured for 'Auto Connect' in auto start mode (see below) but the user wants to change the IP settings of Host or radiometer.

The program first tries to locate the TCP/IP interface and a data cable connected to it. If it does not find a data cable, the message **The specified port in 'R2CH.CFG' has no data cable connected to it!** is displayed as shown in Fig. 3.3.1. This message refers to the file **R2CH.CFG** (located in **MY_DIRECTORY\RPG-XXX**) which is a configuration file that is loaded by **the host software** at program start. This file contains information (among other data) about the standard interface IPs used for the communication link to the radiometer.

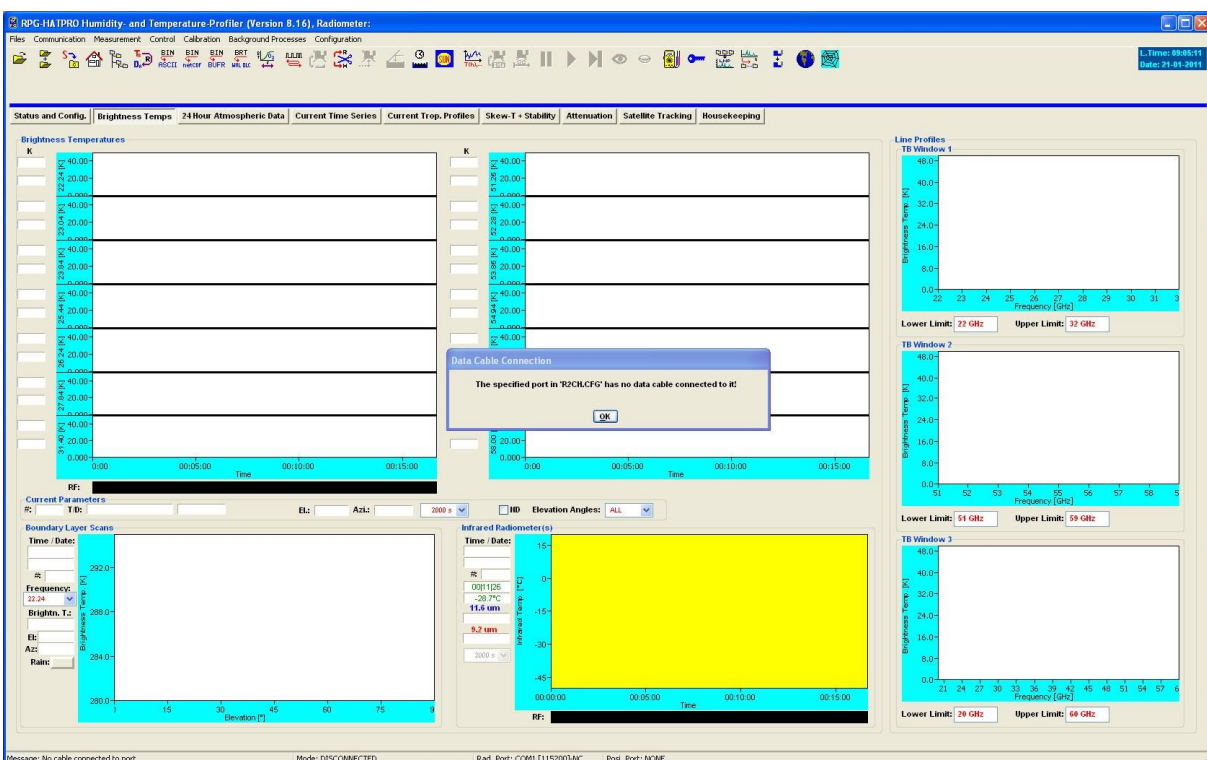



Fig.3.3.1: Starting host software without a data cable connected to the TCP/IP interface.

If a data cable is installed between the host and the radiometer and the radiometer is turned on, the user has to define the TCP/IP settings for the communication. This is done by clicking  (**Define Serial Interface**). This command opens the menu in Fig.3.3.2.

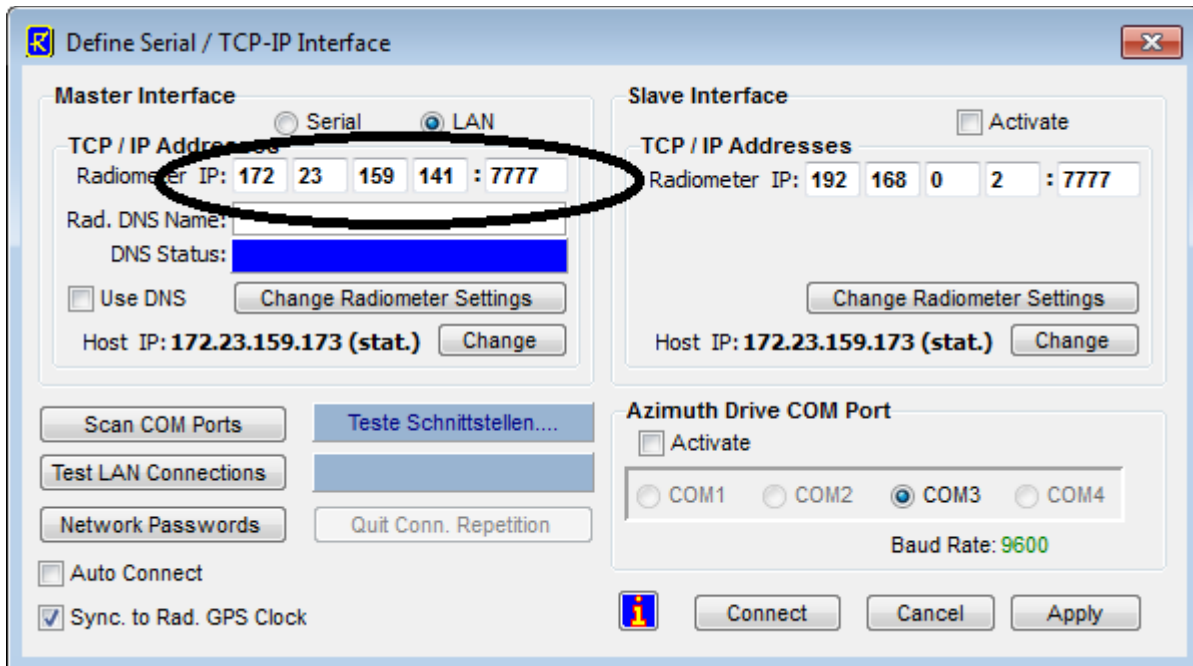


Fig.3.3.2: Ethernet interface menu.

The R-PC is delivered with a certain fixed IP address (**default: 192.168.0.1, port no.:7777**) which can be altered later. For a first connection the user needs to enter this IP to the edit fields right to 'Radiometer IP:' (see encircled line in Fig.3.3.2). The radiometer Gateway is set to the same address as the radiometer IP, which is needed for a peer-to-peer connection between the radiometer and the H-PC. A peer-to-peer connection is an Ethernet connection between two PCs without using a network in between.

In order to set up a peer-to-peer connection, the H-PC must have a fixed IP address as well and its gateway set to the same IP address.

For changing the radiometer IP and gateway, e.g. when the radiometer shall be connected to a network, click **Change Radiometer Settings** (a new menu pops up) and edit the fields to the desired numbers (see Fig.3.3.3):

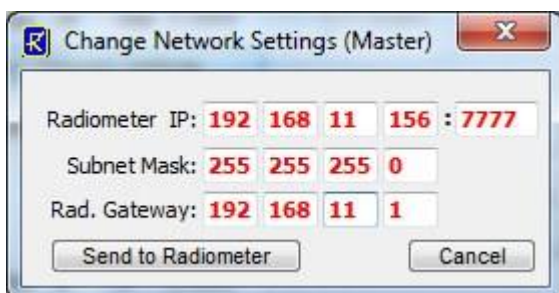




Fig.3.3.3: Change Network Settings.

The red IP / gateway settings are sent to the radiometer by clicking **Send to Radiometer**. After new IPs have been successfully sent to the R-PC, it will be no longer reachable through the old IP / gateway addresses. In the case of a successful transfer of the new IP / gateway to the radiometer, the new IP is copied to the current IP fields automatically so that the H-PC can continue its connection to the radiometer. Then click **Connect**. You may test the connection with **Test LAN Connections**. The H-PC will then try to get access to the R-PC via the specified IP address. If the connection is successful, the blue field will show 'STANDBY', otherwise 'No Connection'.



If **Auto Connect** is checked, the host software automatically attempts to connect to the radiometer during the starting phase (if a data cable is detected). This feature enables an auto-start up function after a power failure of the host PC.

The sequence for setting up a communication link to the radiometer is the following:

- Install the interface cable between host PC and radiometer.
- Turn on the radiometer power.
- Wait for 1 minute until the radiometer PC has booted up and the elevation mirror has moved to its index position (the mirror movement is quiet, but easily audible).
- Start the host software (if not already done) and define the Ethernet interface parameters as described above (if not already done in a previous session)
- The next step is to initiate the communication between H-PC and R-PC by pressing  (**Connect to Radiometer**). If successful, the message **Connection to radiometer successfully established** is shortly displayed and on the bottom of the software interface is displayed **Mode: CONNECTED**. Otherwise the message **Radiometer does not respond! Connection could not be established...** appears. In this case try the following to handle the problem:
 - Repeat the  command.
 - If not successful, check the data cable (is it properly connected to host and radiometer?).
 - Check that the radiometer power is turned on.
 - Repeat the turn on procedure.
 - If not successful, contact RPG.

3.4 Sending a Measurement Definition File

The details of how to define a measurement definition file (MDF) are not explained in this manual. Please refer to the software manual for more information about MDFs.

In the following, we assume that a valid MDF file is already defined and stored to a directory on the Host PC.

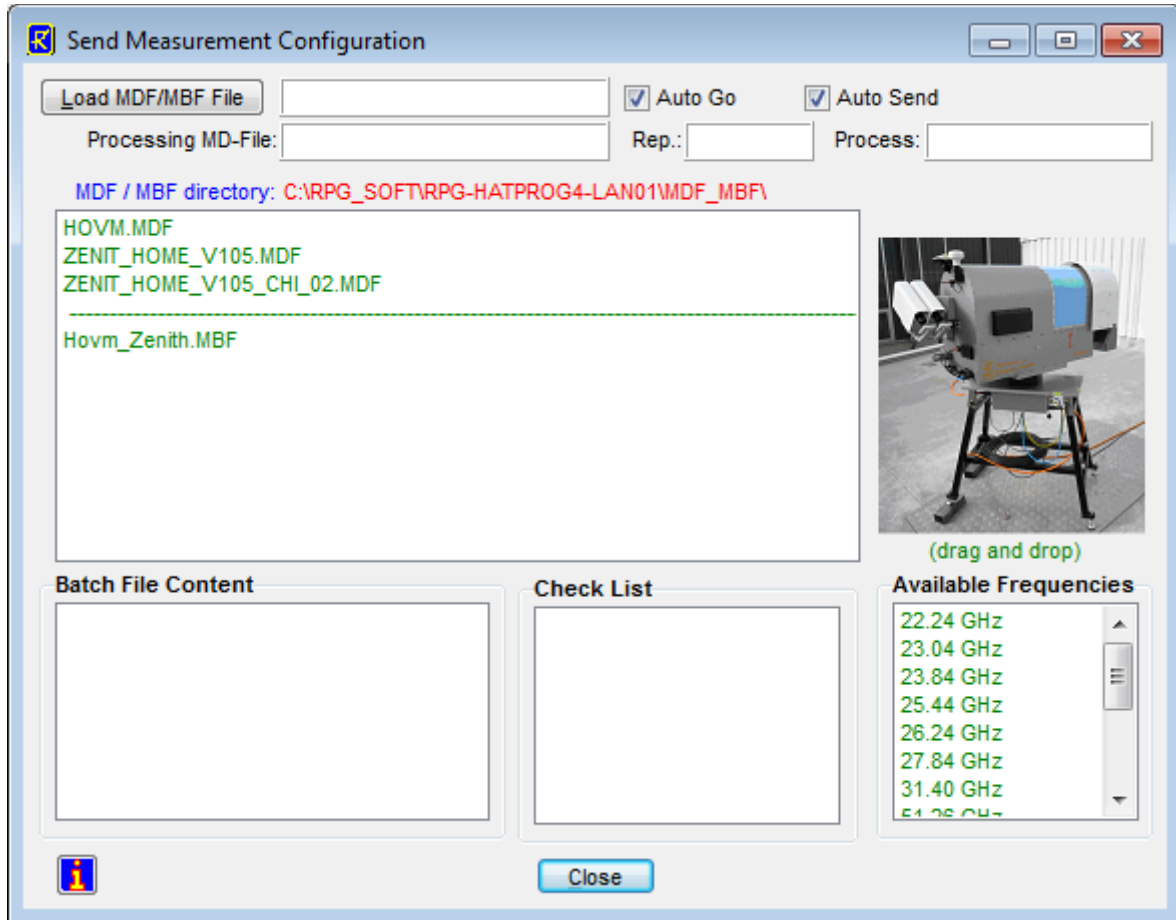



Fig.3.4.1: Menu for sending an MDF to the radiometer.



In order to send a MDF to the radiometer, click the  button (**Send Measurement Configuration**). The menu in Fig.3.4.1 is shown.

Check the two checkboxes **Auto Go** and **Auto Send** and mark one of the MDF files listed in the MDF list. Drag and drop it to the radiometer image on the right. The measurement will automatically start.

When an MBF is loaded (**Load Batch File**) its contents and repetition factor are displayed. In addition some pre-checks are performed, e.g. correct radiometer configuration, frequency list consistency, etc. A variety of other checks ensure that no erroneous command data is sent. When the consistency check of a MDF is finished, the test result is displayed in the **Check List**. The batch can only be sent to the radiometer if all consistency checks have finished with the status OK. Then the MBF is transmitted with **Send Batch**.

3.5 Browsing Through the Measurement Displays

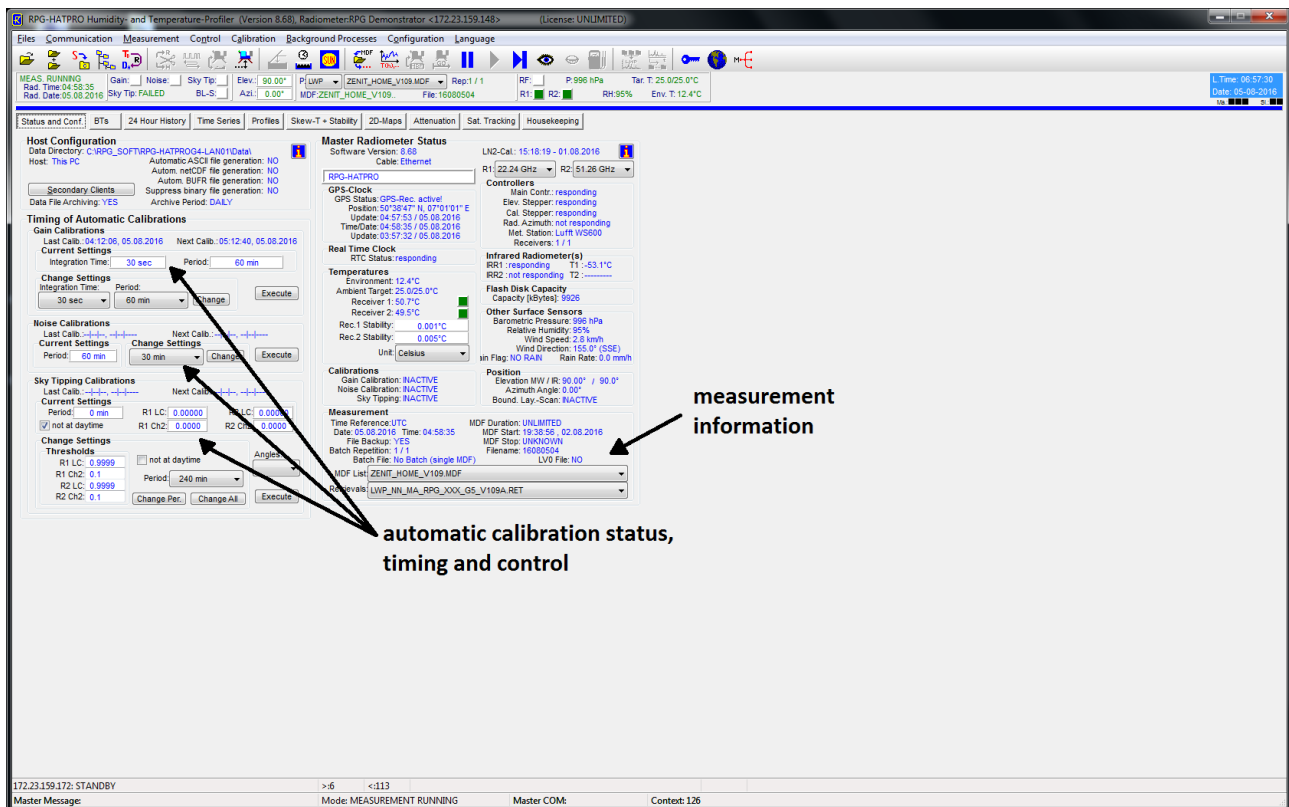


Fig.3.5.1: Radiometer status, measurement configuration and automatic calibration display.

The monitoring of the products that were selected in the MDF is automatically activated and the measured data is displayed. Since the data is transmitted online from the radiometer to the host, no additional file transfer is required afterwards.

The data display is **grouped** into different tag fields that can be freely selected.

Status and Configuration: This group includes the status display of the radiometer and measurement information like the current processed MDF, current data filename, activation status of file backup, start and end time, etc. In a second box, the settings for the automatic calibrations



are displayed (**Automatic Calibration Timing**). These settings, like calibration period and integration time, can be changed 'on the fly'. Each calibration is performed automatically but there is the possibility to enforce a calibration by clicking the associated **Execute** button.

Brightness Temperatures: All brightness temperatures, at both microwave and IR frequencies, are displayed in this group.

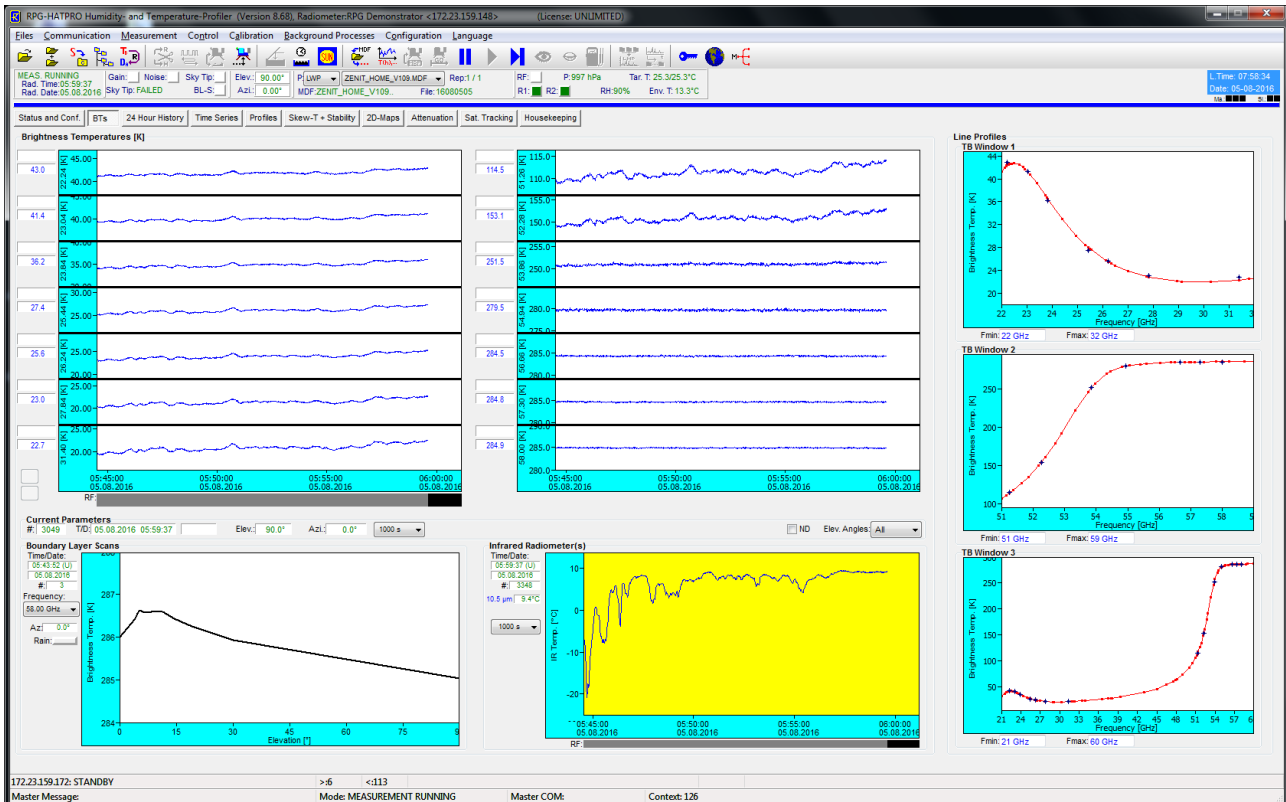


Fig.3.5.2: Brightness temperature information.

The display includes the time series of each available microwave and IR channel, the boundary layer scan information and the line profiles, if applicable (e.g. the water vapor and oxygen lines). The three **TB Windows 1-3** each show a subset of the microwave channels that is defined by entering the **Low Limit** and **High Limit** of the displayed frequency range.

Time series graphs can be changed by selecting a different time axis period from the time axis selection box.

Atmospheric Data (24 hours): A 24 hour history of IWV, LWP, meteorological sensors and profiles is continuously updated in this group. The IWV, LWP and sensor data displays can be individually changed to a 3, 6, 12 or 24 hour history. In the profiles boxes, color scales, vertical axis limits and contour values may be changes for the data monitoring. The humidity profile window has a selection button for displaying absolute or relative humidity.

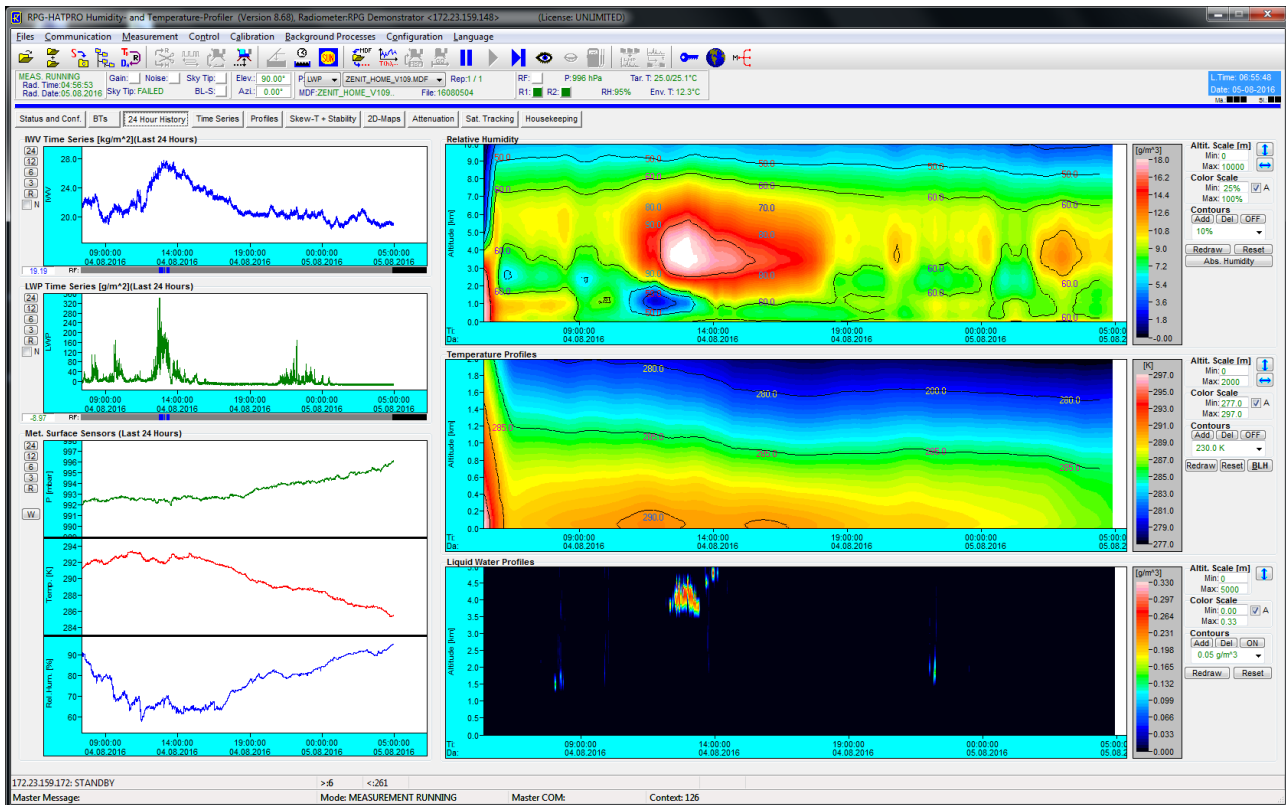


Fig.3.5.3: 24 hour data history display.

Atmospheric Data (Time Series): This group includes time series of liquid water path (LWP), integrated water vapor (IWV), cloud base height (CBH) information and the surface sensors (temperature, rel. humidity and barometric pressure). CBH data is available for all temperature profiling radiometer models (RPG-HATPRO, RPG-TEMPRO, RPG-TEMP90) if the IRR option is installed. LWP, IWV and CBH are retrieved data products and are therefore quality checked. The quality level (High, Medium, Low) and the possible reason for reduced data quality is shown below the time series charts. All time series include a rain flag display. Each window displays the current reference time, date, sample number, sample value, retrieval type (if applicable) and cursor position (when the mouse cursor is moved into the display area).

Current Trop. Profiles: The group summarizes all available profiles. There are three temperature profile displays, one for the boundary layer scan (TPB) with high vertical resolution (range 0-2000 m), one for the zenith observation (TPC, full troposphere profile with coarser resolution in the boundary layer) and one for the composite profile (CMP.TPC). The composite temperature profile is a combination of the high vertical resolution boundary profile and the full troposphere profiles. Both profiles are linked together at the 1200 m altitude level by applying a cubic spline fit. The temperature profiles are in blue color while the dew point temperature profiles are in green. Dew point information is only available (and displayed), if the radiometer is equipped with a humidity profiler. Absolute humidity and dew point temperature are only different versions of the same information content. Like with all temperature displays, the temperature axis can be scaled to Celsius, Fahrenheit or Kelvin.

On the bottom of the screen the diagrams for absolute humidity (HPC), relative humidity and the liquid water profile (LPR) are shown. The LPR data product is automatically generated when the products LWP, IWV and IRT are selected in the MDF product list and a retrieval for the maximum LWC is installed in the LWP retrieval directory (must have the same retrieval filename as the LWP retrieval but starting with 'LWM' instead of 'LWP'). X-axis: LW-density [g/m³], Y-axis: altitude [m].

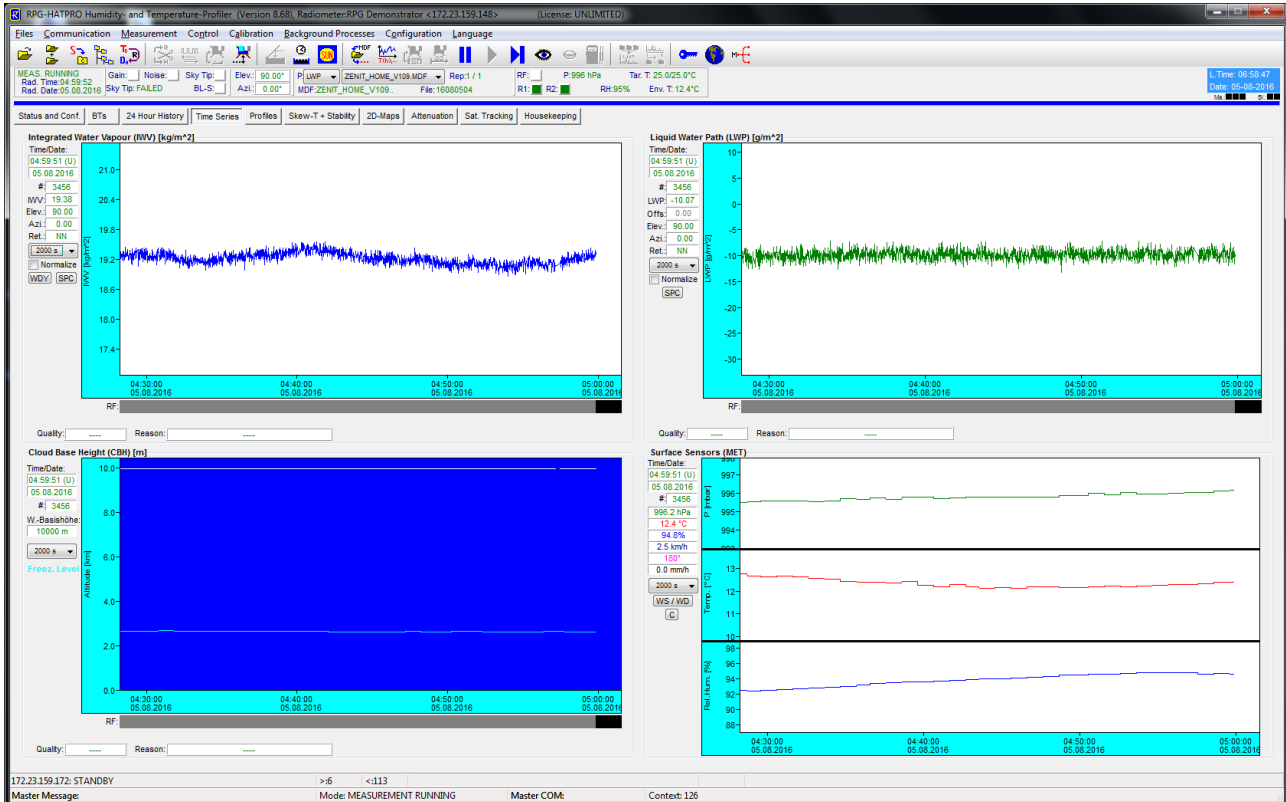


Fig.3.5.4: Time series of atmospheric data like IWV, LWP cloud base height and sensor data.

Scew-T & Stability: This group includes a skew-T and a stability index display. Six of the most common stability indices (lifted index, K-index, KO-index, Showalter index, CAPE index, total totals index) are monitored. X-axis: measurement time, Y-axis 1: [K] index, Y-axis 2: CAPE index [J/m³]. By double clicking on any of the stability indices boxes more information about the chosen index will be provided.

The skew-T plot is automatically generated when temperature and humidity profiles are sampled. Also the stability indices are computed and stored in files of extension '.STA'. The displayed temperature and dew-point profiles can be analyzed graphically by using the cursor on the skew-T chart. The cursor coordinates, P and T, are monitored as the cursor is moved across the diagram. Other useful information like the LCL (Lifted Condensation Level) and LFC (Level of Free Convection) is marked on the Skew-T.

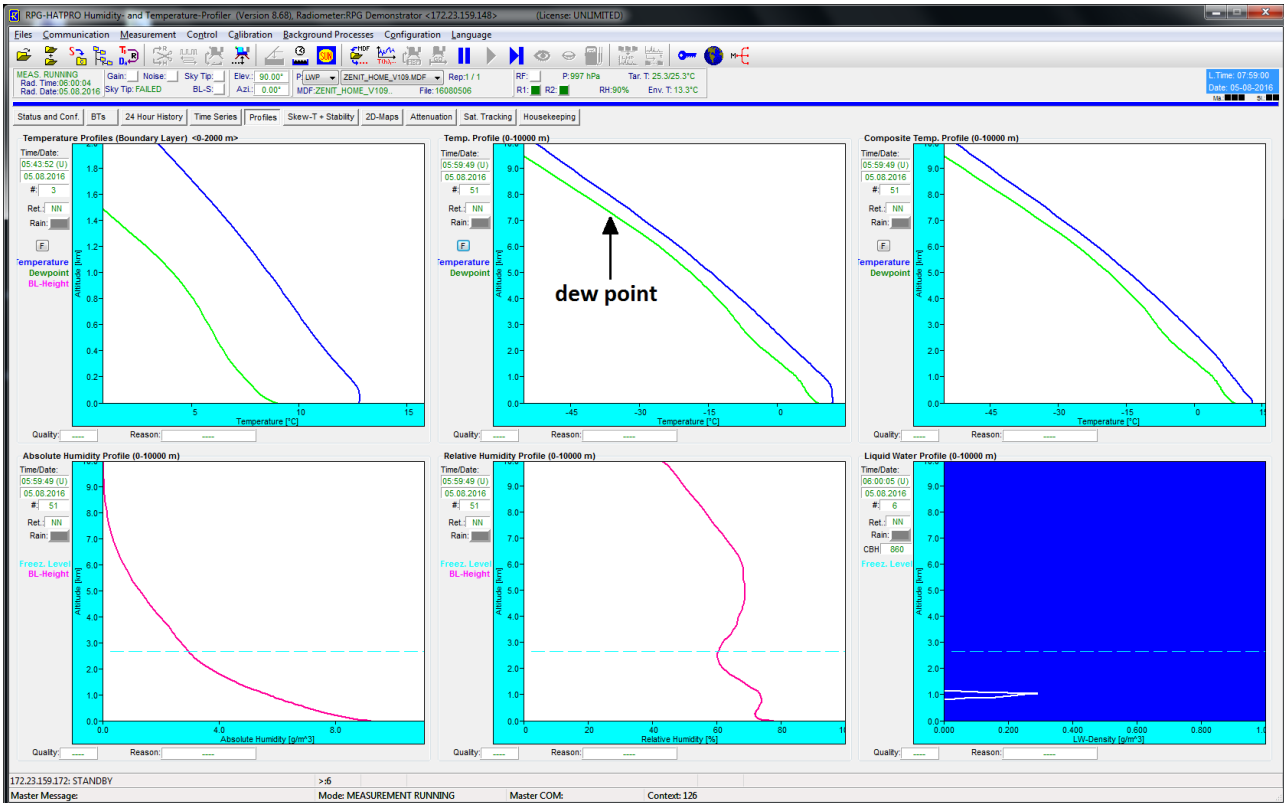


Fig.3.5.5: Atmospheric profiles display.

Attenuation: This display is similar to the brightness temperature diagram and monitors the time series of atmospheric attenuation. The vertical axis unit is dB as the standard unit for damping parameters. The attenuation is only calculated for the microwave channels. The standard attenuation retrievals are applicable for all elevation angles and can be used in scanning mode.

Satellite Tracking: If satellite tracking is enabled in the running MDF, the scanned satellite information, like satellite number, navigation file, satellite elevation and azimuth position, wet path delay and LWP along line of sight and atmospheric attenuation are listed for each scan.

Housekeeping: Data like GPS position, receiver stability, system temperatures (ambient target, receiver temperatures), flash memory capacity, quality flags and system status flags are monitored. By clicking the **Legend** button, the color codes for the different flags are listed. An ALARM indicator warns the user if a systematic problem with the radiometer has occurred. A detailed description of housekeeping flags is given in appendix A18 of the software manual.

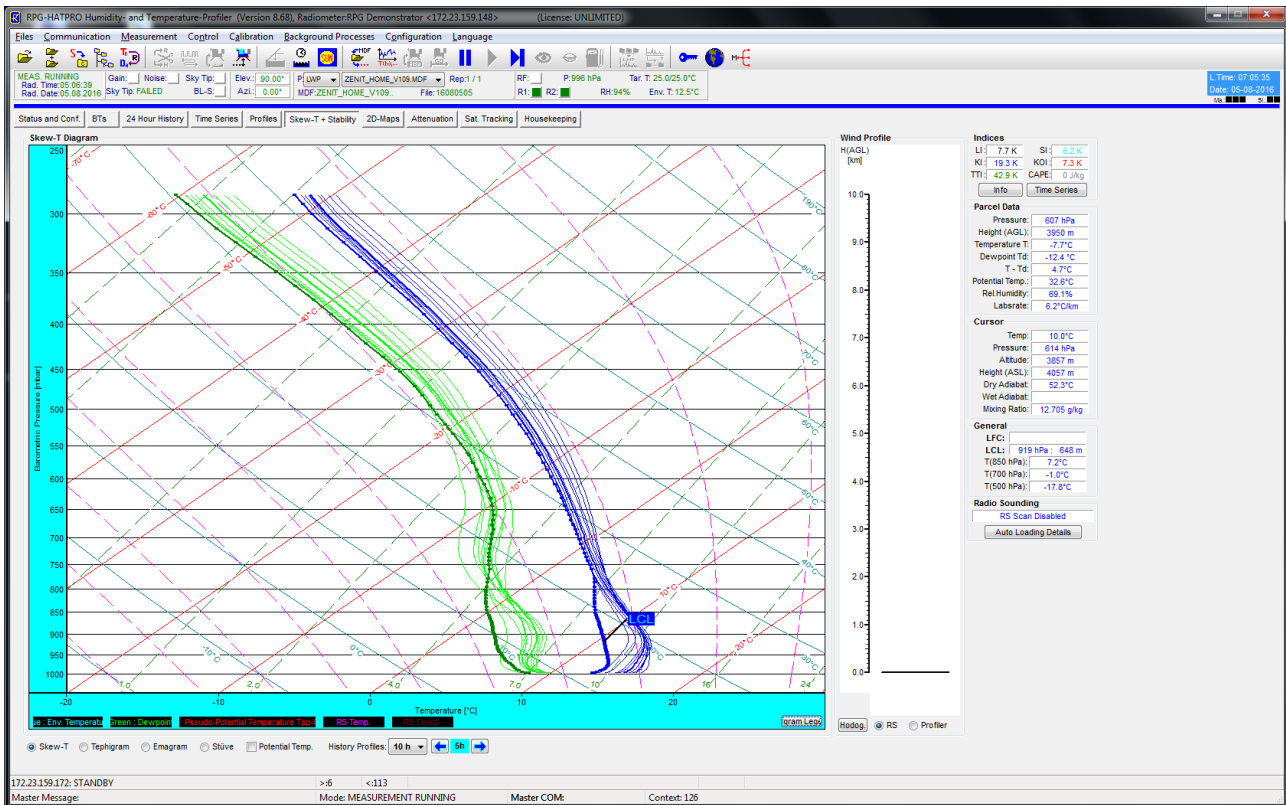


Fig.3.5.6: Skew-T diagram and Stability Indices.

3.6 Starting/Stopping Measurements

(Halt Running Batch)

A running measurement can be halted any time. This might be useful when e.g. the user wants to change the elevation angle manually. The status bar display changes to “MEASUREMENT HALTED”.

(Continue Interrupted Batch)

Used to continue a halted measurement. The status bar display changes back to “MEASUREMENT RUNNING” and the manual control button is disabled.

(Terminate Running Batch)

This command terminates the execution of the currently running batch. The radiometer switches to STANDBY mode and is ready to receive a new MBF.



4 Maintenance

4.1 Cleaning

RPG radiometers are designed to withstand all kind of weather and climate conditions. However, it is a good practice to prevent accumulations of dust, dirt, debris, salt (if located close to the sea), and other pollutants. Such cleaning is best done

- With pure fresh water (no chemical detergents, soap, solvent etc.)
- Without applying mechanical force, especially to the microwave window
- Just by watering and spraying gently to wash away the accumulated pollutants (and thus simulating a rain shower...)

The air inlets to the radiometer (at sidewalls of main housing) and the inlet of the dew blower/heater device need to stay clear from larger scale size of debris.


In areas with extreme snow amounts and ice-rain, the radiometer needs to be checked for snow/ice obstacles which would prevent the moveable parts (if any, depending on the selected options) from rotating. This affects the azimuth positioner and the IR elevation scanner.

All these cleaning activities need to be carried out according to the demand generated by the specific local environmental conditions. The intervals vary from twice a year (during the recommended LN2 calibrations) to weekly or daily (on ships).

4.2 Software Upgrades

Assumption: You want to install a new radiometer software version (RadPC.EXE) on the embedded radiometer PC and a new version of R2CH.EXE on the host PC.

1. Step: Save the old software versions

- a) Create a directory to save the old software versions (e.g. C:\MyPath \SAVE).
- b) Connect the host to the radiometer and enter the File Transfer Menu (, Fig.4.2.1). On the left side (Host) browse to the directory for saving the files (e.g. C:\MyPath\ SAVE) and on the right side (Radiometer) in the RPG-Radiometer Directory mark the RadPC.EXE file. Then drag and drop the RadPC.EXE file to the C:\MyPath\ SAVE directory to initiate the copy process.
- c) Locate the R2CH.EXE file in the MyPath\ RPG-HATPRO directory and copy this file to the C:\MyPath \SAVE directory (by using the Operating System Explorer).

2. Step: Overwrite the old versions by the new ones

- a) Copy the new version of RadPC.EXE (the radiometer PC software) on an arbitrary directory on your hard disk (Host PC) (e.g. MyPath\RPG-HATPRO\Radiometer PC). Then enter the file transfer menu in Fig.4.2.1 and browse to that directory. Mark the RadPC.EXE file in the File-list and drag and drop it to the RPG-Radiometer Directory list on the Radiometer PC. Because you are now going to overwrite a file in the RPG-Radiometer Directory (which is password protected for write access) a password entry window pops up. Please enter the following password in exactly the way as it is printed here:

theringsofsaturn

Press OK and the RadPC.EXE on the radiometer PC will be overwritten by the new RadPC.EXE version. Exit the File Transfer Menu after that.

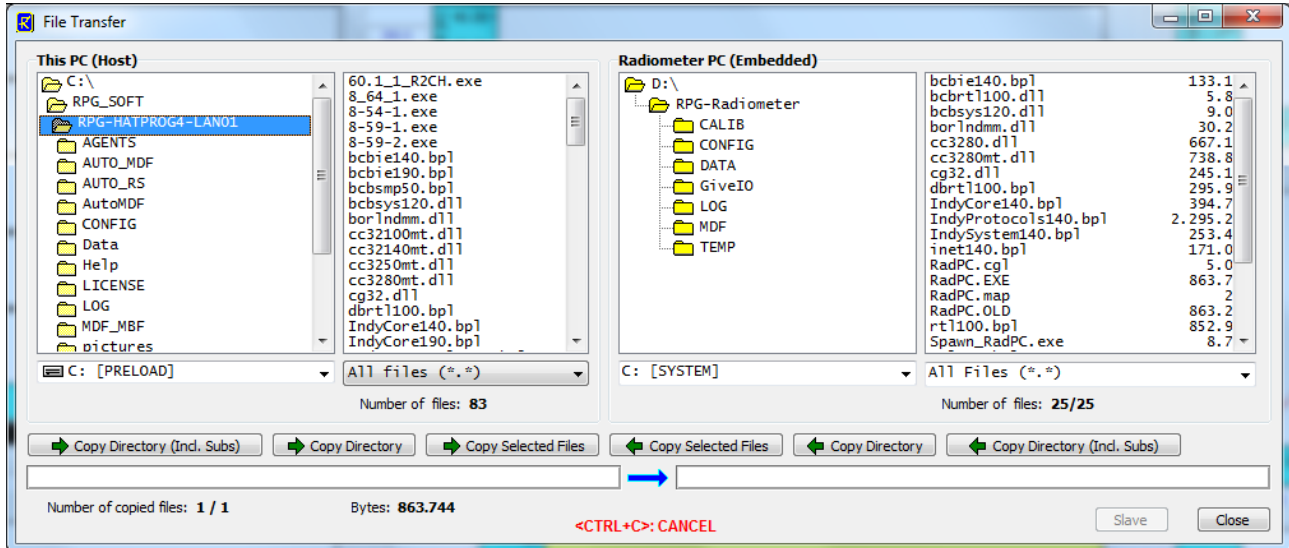




Fig.4.2.1: File Transfer Menu

- b) Boot the radiometer PC to make the new RadPC.EXE the running version. You can do this by entering the Manual Control Menu  and selecting the "Radiometer System" tag. Press the "Restart Radiometer Software" button and confirm the command with YES. Wait for about 2 minutes to give the boot process time enough to finish.
- c) Terminate R2CH.EXE and overwrite the old R2CH.EXE in MyPath\ RPG-HATPRO with the new version.
- d) Execute R2CH.EXE to start the new host version and reconnect to the radiometer with .

The software upgrade is finished. You can confirm the successful upgrade by reading the software version numbers of both, the embedded radiometer PC (see main window radiometer status display) and the host PC (see main window caption).

4.3 Absolute Calibration Procedure

It is assumed that the radiometer has been setup properly:

- The instrument is aligned horizontally and with respect to the Northern direction.
- A connection between the Host-PC and the internal Radiometer-PC has been established.
- The instrument completed the warm-up phase, i.e radiometric receivers are stabilized (green stability flags)

As a final step towards regular operations the user has to perform the absolute calibration procedure. The absolute calibration relates the observed detector voltages U_{det} to measured brightness temperatures of the scene (T_{SC}). For each receiver channel, this relation can be described by 3 calibration parameters: the receiver gain g , the system noise temperature T_R and the non-linearity parameter α .

$$U_{det} = g (T_{SC} + T_R)^\alpha$$

The complete G5 series of RPG radiometers is based on a calibration procedure with two blackbody targets and an internal noise diode for additional noise injection. The “hot” blackbody target is realized by a foam absorber inside the radiometer housing. The blackbody emission at ambient temperature serves a calibration reference. The physical temperature is measured with an accuracy of 0.1 K by a sensor inside the target. The “cold” calibration point is provided by RPG’s newly developed precision target **PT-V1**¹. This target is externally mounted to the radiometer. Like for the ambient temperature target, a foam absorber is used, now cooled by Liquid Nitrogen (LN2). The cold target provides an absolute brightness temperature accuracy of $\pm 0.1 K$. During the calibration procedure the internal scanning mirror is used to point the receiver antennas toward each target. **Fehler! Verweisquelle konnte nicht gefunden werden.** shows the general setup used for the absolute calibration.

G5 receivers use fast noise switching procedures. This means during measurements an internal noise diode is referenced at high frequency. The additional noise that is injected into the signal path is characterized by a high temporal stability. This means it can be used for continuous adjustment of receiver gain variations. The noise diode is calibrated during the absolute calibration procedure. The determined noise diode temperatures T_N complete the set of calibration parameters.

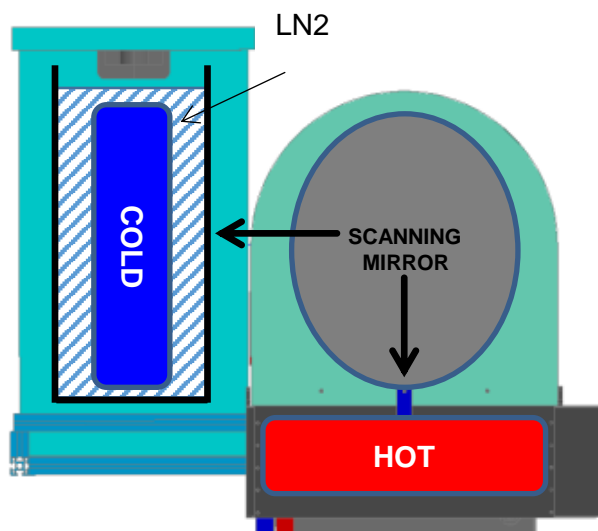


Fig. 4.3.1: General setup for absolute calibration.

¹ Two different versions of the precision target are available: 1) The standard version for all instruments with receiver channels below 100 GHz, 2) A smaller sub-mm version for all models with channel frequencies above 100 GHz.

4.3.1 External Cold Calibration Target

The cold calibration target PT-V1 uses a container made from white foam material, which is highly transmissive to microwave radiation. The blackbody absorber is nested inside the container the blackbody absorber (*Fig. 4.3.2*). Before an absolute calibration the inner part of the foam container is filled with LN₂. Consequently, the blackbody absorber is cooled down to the well-known boiling point of LN₂². For better handling the foam container is encased by an aluminum casket with a lid on top. The lid, combined with the thick sidewalls of the white foam container, insulates the LN₂ from the environment. This minimizes the evaporation of LN₂ and the entrainment of atmospheric oxygen.

The metal casket has two observation windows at each of the large side walls. Each side fits to one of the two receivers, which are included in most models of the G5 series (e.g. for RPG's standard HATPRO radiometer). By turning the target during the calibration procedure each of the receivers can observe the cold absorber. The target's observation windows include an anti-reflection coating, which prevent reflections and the development of standing waves between the receiver and the calibration target.



Fig. 4.3.2: Cold calibration target PT-V1 container (left) and blackbody absorber (right).

4.3.2 Mounting of the Cold Calibration Target

For the calibration procedure the target is resting on the special table. Like the target, the table is part of the standard equipment delivered with RPG radiometers. The table is mounted on the side of the radiometer housing, which is facing North (red arrow on housing). First remove the two protective screws from the radiometer housing as shown in Fig. 4.3.3.a) and b). Then put the table to the radiometer housing and fix it with the little metal pole as indicated in Fig.4.3.3.c)d) and e). Now fix the screws which are attached to the table as shown in Fig 4.3.3.f) and g).

² 77.2 K at standard atmospheric pressure. The correct boiling point is calculated from the pressure value that is provided by the integrated weather station.

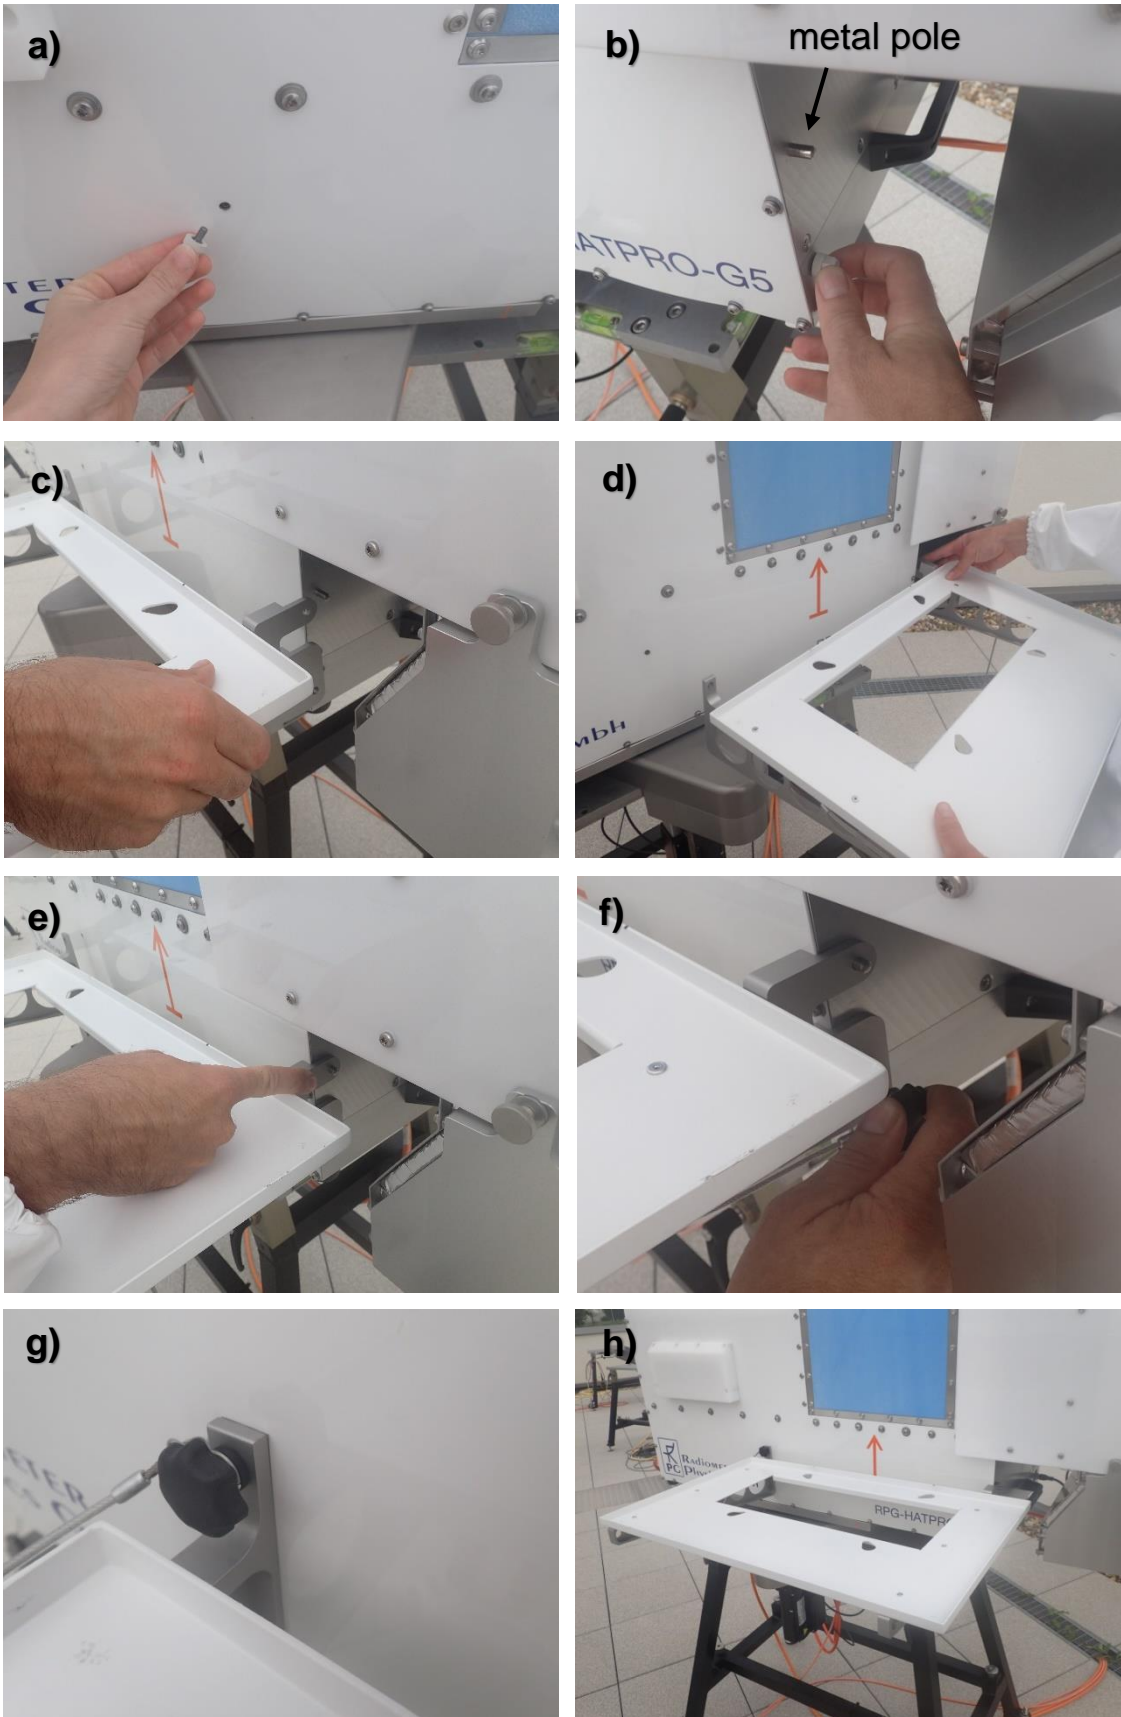


Fig.4.3.3: Step by step guide to mount the table for the absolute calibration target.

4.3.3 The Calibration Procedure

The cold calibration target needs filling of about 40 liters of LN₂. We recommend having at least 50 liters available for each calibration. Due to this weight, the performance requires two people for safety reasons.

Note: Handling liquid nitrogen without protection like gloves, goggles, aprons etc. is risky and can lead to serious injuries. We strongly recommend wearing these protection items while doing the calibration. Only trained personal should be allowed to handle LN₂. Without wearing gloves, goggles and aprons the users are acting at their own risk.

When filling the calibration target with LN₂, leave about 5 cm space up to prevent spilling of LN₂ when carrying the target and close the lid. Then carry the target with two persons to the radiometer and mount it on the table as in Fig. 4.3.5.a) and b). Make sure, that the cold target observation window marked with "R1" is facing the radiometer. Now fill the rest of the target with LN₂ as shown in Fig. 4.3.5.c) and d) and close the lid again.

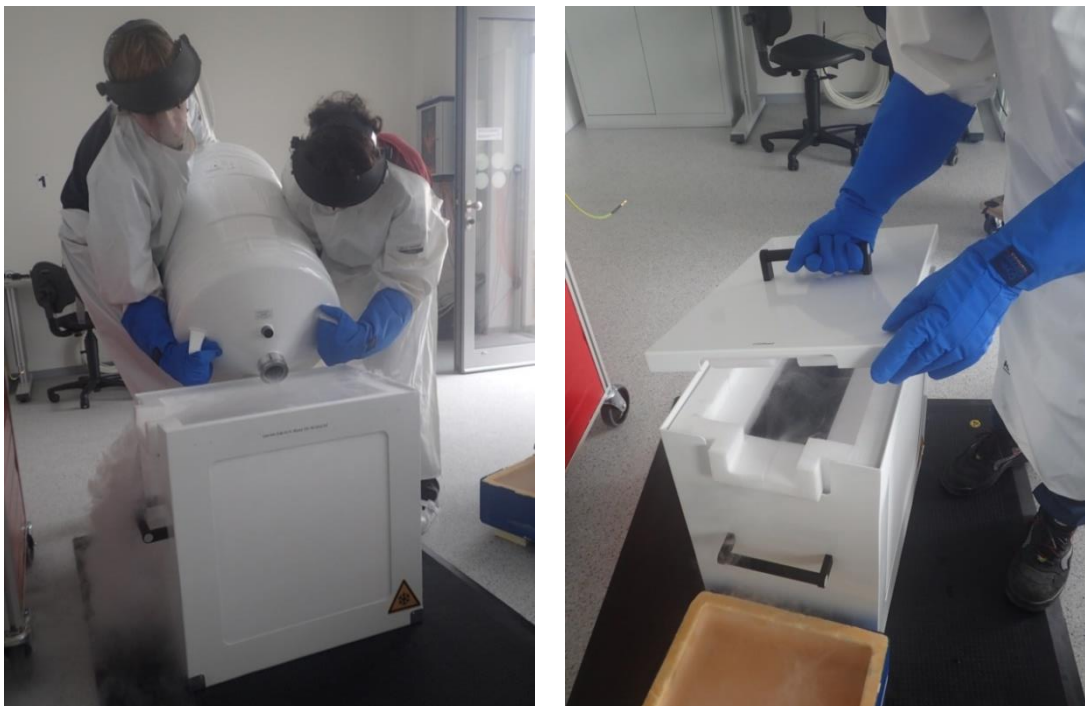


Fig. 4.3.4: Filling the calibration target with LN₂.

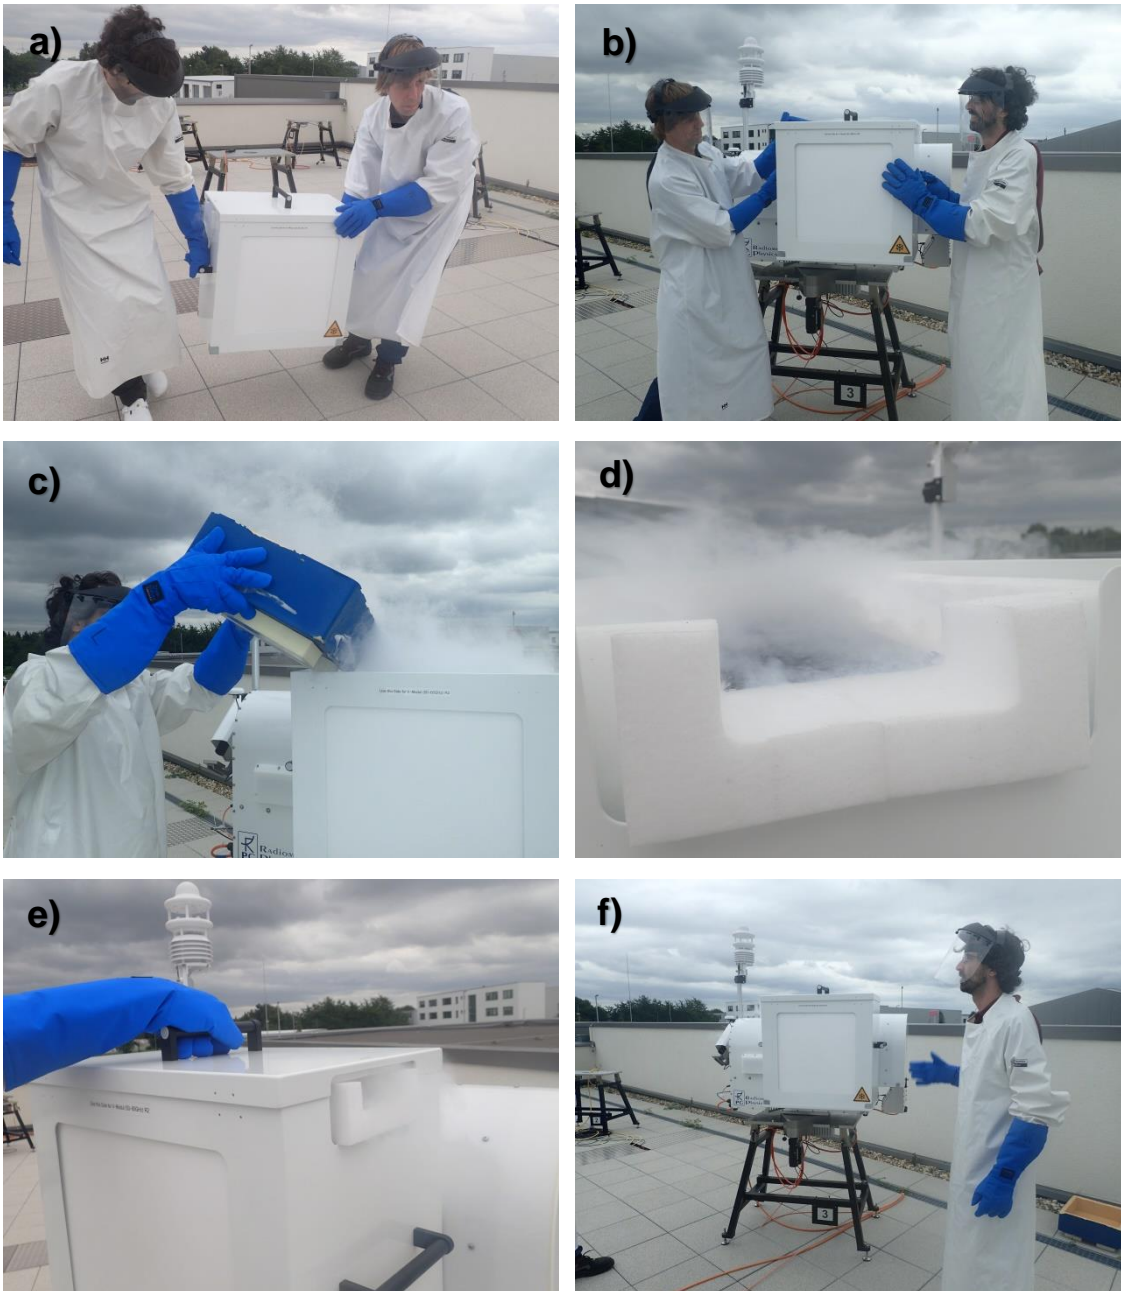



Fig.4.3.2: Put the target on the table. Make sure that the target's sidewall marked with "R1" is facing the radiometer.

After the target has been set up, initiate the absolute calibration procedure by clicking  (**Perform Absolute Calibration**) within the Host-PC software.

When using G5 radiometers you have to ensure that the check-box **PT-V1 Target** for the new calibration target is activated. In this case the integration time on each target is set to 100 s. The calibration procedure for the new target consist of 3 observation cycles:

1. ambient temperature target
2. cold target - observation window marked with "R1" facing the radiometer
3. cold target - observation window marked with "R2" facing the radiometer



Please note that between step 2. and 3. the cold target has to be turned by 180° and settled on the table again. During the calibration process the current activity is displayed in the message line. Please follow step-by step guide provided by the below figures. If the error message *No response to cold load. Calibration terminated!* appears, the cold target was probably not filled with liquid nitrogen or was not installed at all. *No noise diode response. Calibration terminated!* indicates a malfunction of one of the noise sources. Contact RPG for help in this case.

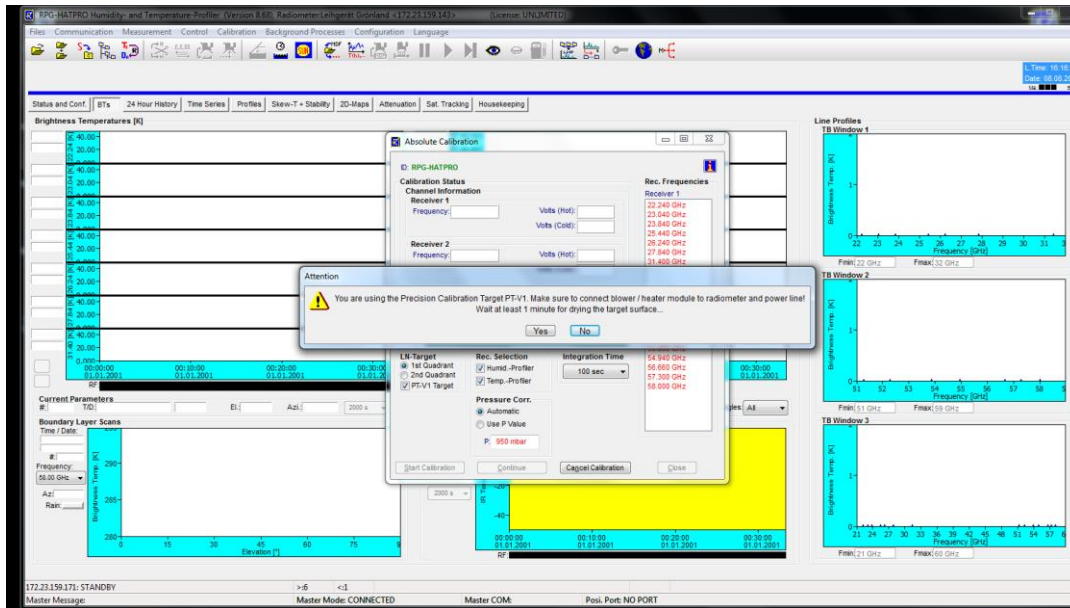


Fig4.3.3: Wait for at least 1 minute before you actually start the calibration procedure!



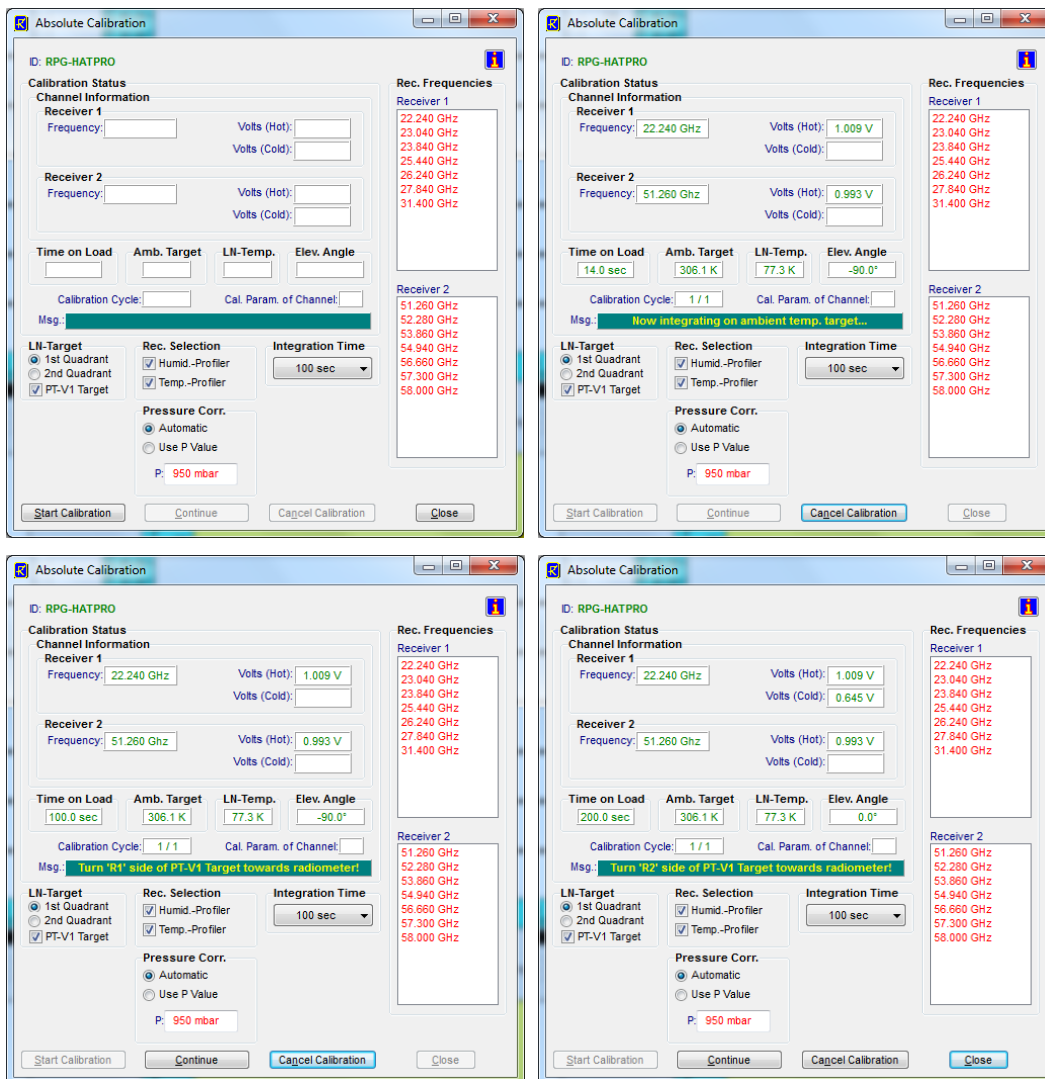


Fig.4.3.4: a) The button **Start Calibration** starts the absolute calibration procedure. The dew blower will switch to high-speed mode and the heater will be activated. This prevents condensation of water vapor on the target observation window facing the radiometer. b) The radiometer will integrate on the ambient target for 100 s. c) Since the target was mounted on the table with “R1” side facing the radiometer, you can click **continue**. d) After another 100 s the measurement stops and you need to turn the target by 180° so that “R2” side is facing the radiometer now.



Fig.4.3.5: Turn the radiometer by 180° so that “R2” side of the target is facing the radiometer now.

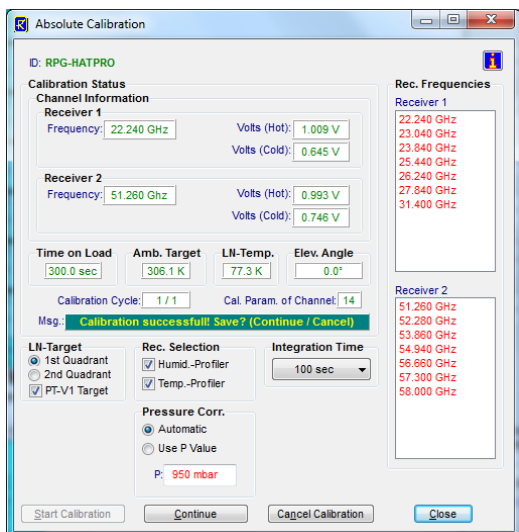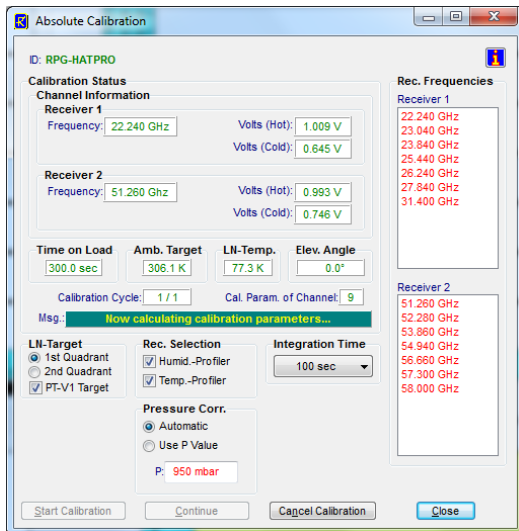

Previous Calibration			
Receiver 1:	Calibration Type: ABSOLUTE	Date/Time: 01.08.2016 15:56:36	Env. Temp.: 295.36 K
	Hot/Cold Temp.: 309.67 K / 77.23 KAtm. Press.: 998.5 hPa		
	Gain:	System Noise:	Noise Diode:
22.240	1.9591 mV/K	22.240	312.470 K
23.040	1.5717 mV/K	23.040	316.301 K
23.840	2.0000 mV/K	23.840	260.467 K
25.440	2.0577 mV/K	25.440	241.051 K
26.240	2.2315 mV/K	26.240	233.166 K
27.840	2.0001 mV/K	27.840	245.432 K
31.400	1.8673 mV/K	31.400	304.664 K
51.260	1.5717 mV/K	51.260	576.413 K
52.280	1.4416 mV/K	52.280	611.107 K
53.860	1.4003 mV/K	53.860	546.657 K
54.940	1.3749 mV/K	54.940	535.604 K
56.660	1.6335 mV/K	56.660	535.449 K
57.300	1.3936 mV/K	57.300	543.279 K
58.000	1.3961 mV/K	58.000	539.624 K
51.260	2.404563 K	51.260	2404.563 K
52.280	2.318963 K	52.280	2318.963 K
53.860	2.091182 K	53.860	2091.182 K
54.940	2.000325 K	54.940	2000.325 K
56.660	1.920974 K	56.660	1920.974 K
57.300	1.863697 K	57.300	1863.697 K
58.000	1.915641 K	58.000	1915.641 K
51.260	0.95650	51.260	2372.489 K
52.280	0.95957	52.280	2333.257 K
53.860	0.97531	53.860	2058.752 K
54.940	0.96039	54.940	2023.815 K
56.660	0.95939	56.660	1937.222 K
57.300	0.97554	57.300	1672.164 K
58.000	0.97099	58.000	1927.988 K

New Calibration			
Receiver 1:	Calibration Type: ABSOLUTE	Date/Time: 08.08.2016 14:26:41	Env. Temp.: 292.14 K
	Hot/Cold Temp.: 306.10 K / 77.26 KAtm. Press.: 1001.0 hPa		
	Gain:	System Noise:	Noise Diode:
22.240	1.9513 mV/K	22.240	313.873 K
23.040	1.8670 mV/K	23.040	317.418 K
23.840	1.9999 mV/K	23.840	261.546 K
25.440	2.0590 mV/K	25.440	241.935 K
26.240	2.2176 mV/K	26.240	234.343 K
27.840	1.9906 mV/K	27.840	246.764 K
31.400	1.8533 mV/K	31.400	306.048 K
51.260	1.4445 mV/K	51.260	585.417 K
52.280	1.2676 mV/K	52.280	554.017 K
53.860	1.2676 mV/K	53.860	533.538 K
54.940	1.4513 mV/K	54.940	533.538 K
56.660	1.8925 mV/K	56.660	534.681 K
57.300	1.4170 mV/K	57.300	543.643 K
58.000	1.4265 mV/K	58.000	539.404 K
51.260	2372.489 K	51.260	2372.489 K
52.280	2333.257 K	52.280	2333.257 K
53.860	2058.752 K	53.860	2058.752 K
54.940	2023.815 K	54.940	2023.815 K
56.660	1937.222 K	56.660	1937.222 K
57.300	1672.164 K	57.300	1672.164 K
58.000	1927.988 K	58.000	1927.988 K

Fig.4.3.6: When the target was turned the calibration can be continued by pressing **continue**. After the integration cycles have completed, the calibration parameters will be calculated. The message **Calibration successful! Save?** is displayed. Before confirming the calibration results the calculated parameters shall be checked for consistency with the former calibration. Particularly the system noise temperatures shall be examined carefully. In case these values have changed by more than 10 K within

6 months (recommended repetition rate of absolute calibrations), there might have been a problem with the calibration process or with the receiver hardware. In this case please contact RPG for further assistance. If the results look fine, calibration parameters are stored on the Radiometer-PC by pressing *Continue*.



Fig4.3.10: After calibration and dismantling of the calibration target, make sure that the protection screws are inserted again.

4.4 Exchange/Replacement of Parts

The instrument user is expected to exchange spare parts, which are accessible from the outside (without opening the radiometer housing), by himself. These parts are:

- **GPS receiver**
- **Radome window sheets**
- IR radiometers (if available, optional hardware)
- Weather station (if available, optional hardware)
- Azimuth positioner (if available, optional hardware)
- Dew blower unit
- Heater unit for dew blower
- Cables

Those parts not printed in boldface in the above list were handled during the installation process and are covered in the appropriate section of chapter 2. In the following, this maintenance guide will explain how to exchange those parts which are usually not handled during a standard installation procedure.

4.4.1 Changing the GPS Receiver

The sensor data connection needs to be dismantled by

1. loosening the connector screw of the cable connection
2. loosening the M4 mounting screws with a Torx tool (size 20)
3. detach the sensor

The replacement part is mounted by reversing the sequence of steps. In order to prevent damage to the cable connector, please comply with these rules:

- The pins usually fit easily into the socket of inside the radiometer wall. Do not apply force! If it does not go in easily, then there is some misalignment, canting, etc. Using force will destroy the pins and/or damage the socket
- The screw on the cable should only be fastened with the hand, not with a tong

4.4.2 Changing the Microwave Window Sheets

4.4.2.1 Purpose of the Microwave Window

The microwave window sheets are made from a plastic foam material which is transparent in the microwave region to allow the reception of electromagnetic radiation in the otherwise metallic shielding of the instruments housing. The material has a thickness of 10 mm and serves as a rain protection and also thermal insulation layer. The sheets are covered with a hydrophobic coating which lets water drops roll off easily (in conjunction with the airflow provided by the blower system).

4.4.2.2 When to Change the Microwave Window

If one of the two functions of the window (protection from water, and avoidance of drops staying on the window) is no longer working because the window sheet is either physically damaged, or the coating has been worn off (by aging, salt and dust coverage, UV radiation...), then the window sheet needs to be changed.

Since 2006, all profiling and LWP type radiometers facilitate a radiometer shell with a window mounting which allows changing the window without disassembling the complete radiometer housing.

4.4.2.3 Window Changing Procedure

Before changing the window, make sure that you are equipped with sufficient tools. We recommend a Torxs-M4 (size 20) tool, a thread cutter, an Allen key (hexagon socket screw key) with a round hat, some lubricant/grease, and a carpet cutter.

In a first step, the old window has to be removed. Therefore, all M4 Torxs screws at the inside rows of screws (closer to the blue window, not the line of screws closer to the metal housing) have to be removed (Fig. 4.4.2 b). This way, the metal bands which press and hold the window sheet can be removed. If a screw brakes off, it has to be removed later by drilling it out.

In a second step, the threads inside the housing frame need to be prepared for re-mounting: All threads need to be cleaned from debris and lubricated with grease. A thread cutter is dipped into oil (WD-40) and then turned into each of the threads (Fig. 4.4.2 c)

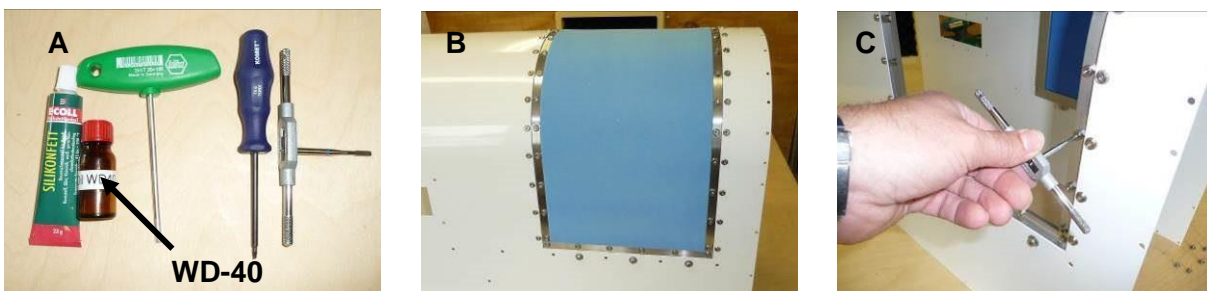


Figure 4.4.2 a, b, c

The metal bands for re-mounting the window sheet need to be arranged carefully to their respective positions since they are **not symmetric!** Figures 4.4.2 (d, e, f) show that the **smaller distance** between the holes and the edge of the strip located in the side of the **window**, the larger distance to the side of the metal housing.



Figure 4.4.2 d, e, f

The mounting procedure starts with placing the replacement windows with the already existing triple set of holes symmetrically over the topmost thread in the radiometer housing (Fig. 4.4.2 g). The metal strips are placed over the window sheet and fixed by fastening the Torx screws as shown (Fig. 4.4.2 h and i).

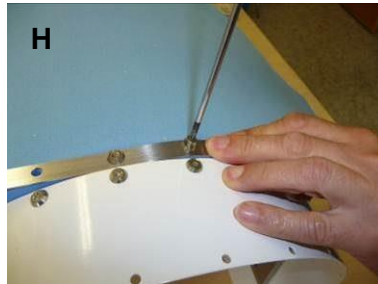


Figure 4.4.2 g, h, i

A small Allen wrench (size M3) is used to punctuate the window sheet material at the position of the next holes (Fig. 4.4.2 L). While working from screw to screw from top down to the lower side of the housing, some force needs to be applied to pull the metal bands tight and apply enough pressure to squeeze the window material into position (Fig. 4.4.2 m, and o). The last screw at the bottom of the long metal strips shall not be completely tightened now.

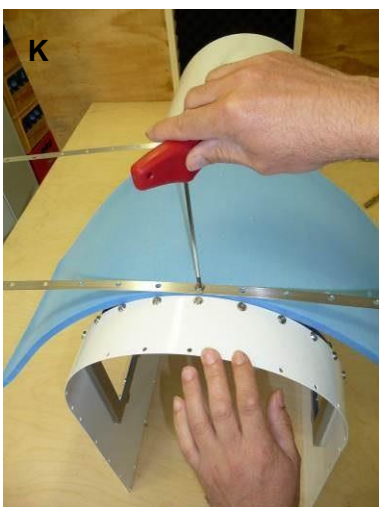


Figure 4.4.2 k, l, m

The pulling of the metal bands is best done with a small Allen wrench, putting the head into the holes of the mounting threads as a counter bearing (as a toe hold). The tool should have a round head, so that the thread is not damaged.

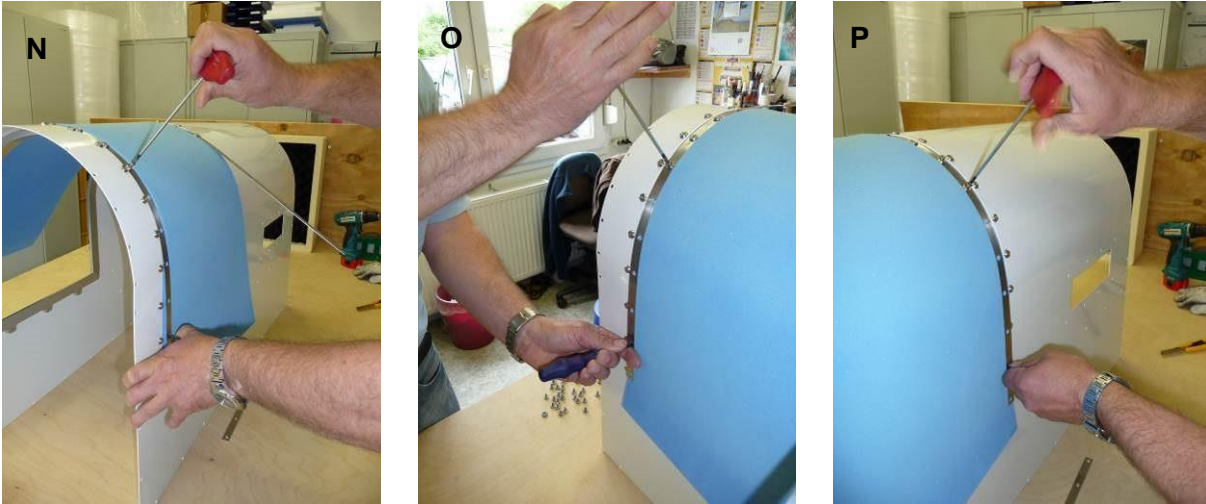


Figure 4.4.2 n, o, p

After applying the two longer metal strips over the arch of the radiometer housing (Fig. 4.3.2 p), there will be extra material of the window sheet at both lower side which needs to be cut off and removed. Figures 4.3.2 q, r, and s show how to use the remaining shorter metal bands for marking and cutting the surplus material with a carpet cutter.



Figure 4.3.2 q, r, s

After cutting the excess material, the window sheet is finally fixed with the short metal bands at the lower sides. After the short bands are fixed, the screws at the bottom of the long metal bands may now be tightened.

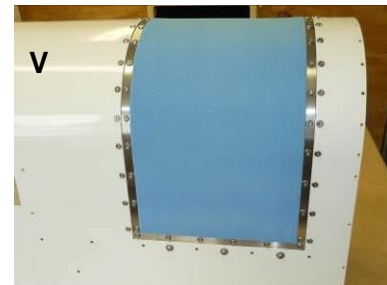
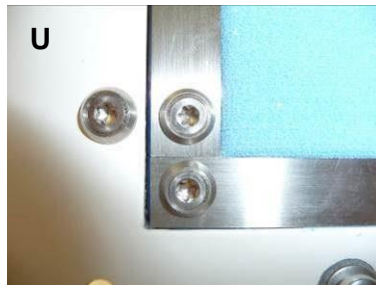


Figure 4.4.2 t, u, v

In the end, the window material should be firmly pressed to the metal housing frame, without leaving any gaps (Fig. 4.4.2 u, v).

4.5 Preventive maintenance

In the table below the given maintenance intervals are average periods. Depending on the deployment site these intervals should be optimized. For instance required cleaning intervals strongly depend on climate zones (arctic, sub-tropic, etc.), the vicinity to polluted areas (cities, sand deserts, airports etc.) or the abundance of insects or other animals (e.g. spider webs).

Activity	Recommended Service Interval
Cleaning of rain sensor	6 month
Cleaning of dew blower	6 month
Cleaning of radiometer housing	12 month
Cleaning of microwave window	6 month
Cleaning of cooler slits	24 month
Cleaning of external sensor cage	6 month
Absolute calibration with liquid nitrogen	6 month
Inspection of cables	12 month
Exchange of microwave window	6 month



5 Trouble Shooting

problem	possible cause	what to do
host connection to radiometer cannot be established	A) bad cable inter-connection B) radiometer PC software has crashed C) host PC interface damaged D) radiometer PC interface damaged E) radiometer not turned on	check all connectors for cleanliness and correct fitting, data cable(s) damaged? Fiber optics cable connected correctly? reset radiometer PC (turn on/off or use reset button) replace host PC contact RPG turn on radiometer power and wait one minute for booting
measured LWP and IWV values unrealistically high	wet radome (microwave window)	dry radome, eventually renew hydrophobic coating or replace window set lower humidity threshold for heater module switching (see Software Manual)
interference (RFI) on one of the reception channels	external high frequency source (e.g. radar, data link, etc.)	use retrievals for level 2 data that are not including the disturbed channel, contact RPG
brightness temperatures show strong drift	A) receivers are not thermally stabilized B) thermal control system malfunction	wait for a warmup period of 45 minutes check receiver temperatures in diagnostics menu (see Software Manual), contact RPG
brightness temperatures show spikes	F) external RFI source G) external obstacle (person, bird, etc...) H) channel malfunction	Remove external source or scan to different direction remove external obstacle contact RPG
message "Measurement finished" in UNLIMITED mode	A) radiometer power failure and radiometer's recovery mode is turned off B) someone manually terminated measurement	activate radiometer recovery mode (see Software Manual)
rain flag always on or off	sensor malfunctioning	Replace weather station

problem	possible cause	what to do
---------	----------------	------------



surface temperature sensor shows unrealistic temperature	sensor malfunction	Replace weather station
surface humidity sensor shows unrealistic readings	sensor calibration parameters not correct	contact RPG for sending new SENSOR.SCL file for installation on radiometer PC
damaged microwave window	birds, ice, vandalism...	replace microwave window (ask RPG for replacement window sheets)
blower always on high speed	humidity threshold for blower high speed and activated heater module too low	increase rel. humidity threshold (see Software Manual)
blower does not work	A) blower not correctly connected to radiometer B) radiometer power off C) blower malfunction	check blower connecting cable turn on radiometer power contact RPG
sky tipping always fails	A) clear sky conditions, inhomogeneous humidity field B) RFI in one of the transparent channels	wait for better atmospheric tipping conditions try other azimuth angles for the elevation tipping, delete the elevation angle (where the disturbance occurs) from tipping list (see Software Manual)
message "No response to cold load" after absolute calibration	A) no liquid nitrogen in external target or no target attached to radiometer box B) one of the receiver channels has failed	install external cold target and fill with liquid nitrogen. Repeat calibration check channel responses in diagnostics menu (see Software Manual), contact RPG
message "No response to noise diode" after absolute calibration	A) one of the channels has low signal level B) the noise diode of one of the calibrated receivers has failed	check channel responses in diagnostics menu (see Software Manual), turn on/off noise diode manually, contact RPG contact RPG

6 Spare part list

– To be edited –




Installation & Maintenance
(standard radiometers)

Spare part	Interval (if preventive)	Reason for change




7 Radiometer dimensions

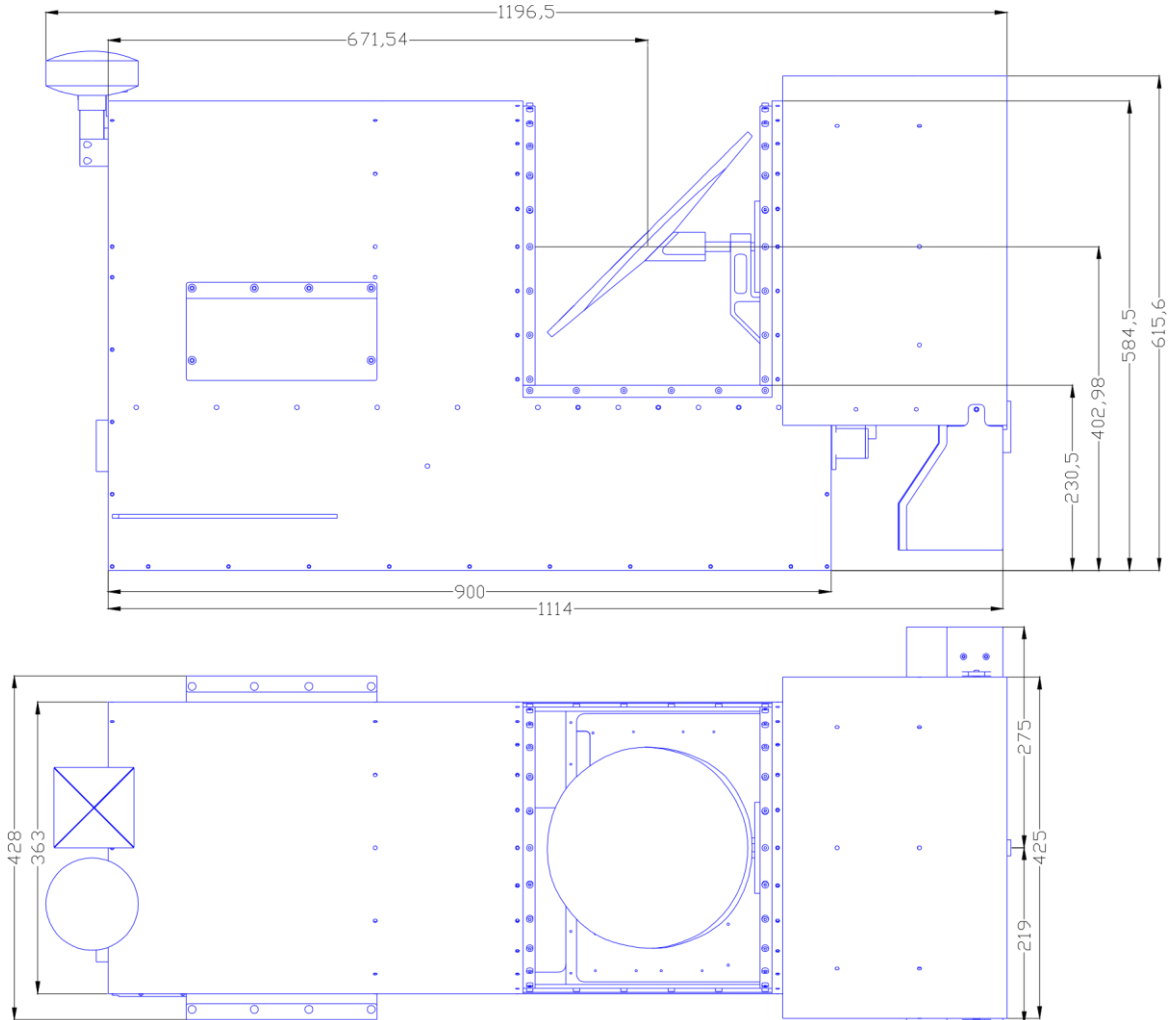

8 Safety Instructions

8.1 Operation Safety Issues

The RPG dual polarization radiometers are huge and heavy instruments. The installation and operation of these systems requires the application of a few safety rules which are listed below together with their international signs.

- 1) The radiometer is made for outdoor use. Indoor use only under observation and WITHOUT Blower-Heater part. Operating the azimuth drive inside a building requires the permanent attention of trained personal.
- 2)  Turn off the radiometer, while working on it.
- 3)  The radiometer rotates 360° about the azimuth axis and +/- 90° about its elevation axis. The positions applies strong forces to lift the several hundred kg heavy equipment. During operation keep a safety distance of at least 2m from the radiometer.
- 4)  While the azimuth drive is moving, keep away your hands from the instruments. Otherwise there is the risk of crushing hands, arms or legs. The strong forces of the positioner can easily brake bones!
- 5)  For safety reasons, install a fence around the radiometer for warning people to enter the danger zone (a circle of 1m radius around the center of the radiometer).
- 6)  When installing the radiometer, make sure the power cord is plugged into a power socket with proper grounding pin (PE= Protection earth). Otherwise the radiometer parts are electrically floating and the instrument may get more easily accessed to high voltages when touching the instrument, if the PE pin is not connected.
- 7)  Use at least 4 people tp carry the radiometer box and when installing on the mounting table. The radiometer box weights about 67kg.
- 8)  Pay attention to the general safety guidelines, while using liquid nitrogen for calibration.